

Instruction Manual

Spa Table MLR SELECT V2

4 motors



Fig. serves as an example only.

Fig. similar: colour, upholstery and design may vary depending on model.



Gharieni Group GmbH Gutenbergstraße 40 47443 Moers / Germany

Phone:	+49 (0)2841/88300-0
Fax:	+49 (0)2841/88300-999
> Sales department:	+49 (0)2841/88300-300
E-mail:	service@gharieni.com
➤ Web:	www.gharieni.com

Area to note the **SERIAL NUMBER**. The serial number of the MLR SELECT is on the rating plate (s. chapter 7. RATING PLATE).

PREFACE

Dear customer,

we would like to take this opportunity to thank you for purchasing our quality product and for the trust you have placed in us.

Read the complete IM before you use the MLR SELECT for the first time. Reading the complete IM is essential for its proper and safe use and will help you to operate the MLR SELECT to your complete satisfaction.

Our MLR SELECT is very robust and has a long lifespan when used properly. Read all instructions carefully and operate the MLR SELECT exclusively in accordance with the intended use as described in the instruction manual. This is the only way to protect your customers and yourself from dangers resulting from improper use.

Always keep the instruction manual within easy reach near the MLR SELECT.

THIS INSTRUCTION MANUAL MUST ALWAYS BE ACCESSIBLE TO EVERY PERSON WHO OPERATES THE MLR SELECT.

MAKE SURE THAT THE INSTRUCTION MANUAL HAS BEEN READ AND UNDERSTOOD BEFORE OPERATING THE SPA TABLE.

⚠ WARNING! Non-compliance with the instructions in this manual endangers the operator's and customer's health and life and / or can damage the MLR Select.

Index

1.	Safety information	5
	1.1 Abbreviations	6
	1.2 Signal words	6
	1.3 Safety instructions	6
2.	Intended Use	. 11
3.	Scope of Delivery	. 11
4.	Preliminary remarks	. 12
5.	Delivery and unpacking of the MLR SELECT	. 12
	5.1 Delivery	. 12
	5.2 Unpacking	. 13
6.	Assembly and transport of the MLR SELECT	. 14
	6.1 Assembly	. 14
	6.2 Transport	. 14
	6.2.1 Use of the carrying aids	. 15
7.	Rating plate	. 18
8.	QR-Code	. 19
9.	Upholstery and design of the MLR SELECT	. 24
	9.1 Upholstery	. 24
	9.2 Versions of the base	. 25
1(D. Operation of the MLR SELECT	. 27
	10.1 Characteristics	. 27
	10.2 Model variants / Number of actuators	. 28
	10.2.1 MLR SELECT / 4 actuators:	. 29
	10.3 Before first use	. 29
	10.4 View (example: MLR SELECT ALU)	. 30
	10.5 Gas springs	. 31
	10.6 Headrest	. 32
	10.6.1 Headrest versions	. 33
	10.7 Armrests	. 34
	10.7.1 Additional locking of the armrests	. 35
	10.8 Legrest	. 36
	10.9 Backrest	36

11	. Adjustments of the MLR SELECT	37
	11.1 Hand control with memory function (optional)	37
	11.1.1 Adjustment of the working height	40
	11.1.2 Adjustment of the backrest	41
	11.1.3 Adjustment of the inclination of the seat section	42
	11.1.4 Adjustment of the Trendelenburg / anti-Trendelenburg function	42
	11.1.5 Memory functions of the hand control	43
	11.1.6 Locking function of the hand control with memory function	44
	11.2 Hand control without memory function	46
	11.2.1 Adjustment of the working height	48
	11.2.2 Adjustment of the backrest	49
	11.2.3 Adjustment of the inclination of the seat section	49
	11.2.4 Adjustment of the Trendelenburg / anti-Trendelenburg function	50
	11.2.5 Locking function / lock button of the hand control without memory function	51
12	. Foot control (optional equipment)	52
	12.1 Foot control with Bluetooth (optional equipment)	56
13	. Heating system (optional equipment)	59
	13.1 Operation	61
14	. Vibro Wellness 10 (optional equipment)	64
	14.1 Hand control	65
	14.2 Operation	66
15	. Reset	69
16	. Cleaning and maintenance of the MLR SELECT	71
	16.1 Cleaning of the upholstery	72
	16.1.1 Cleaning and care of the polyurethane material (PU)	72
	16.1.2 Cleaning and care of the artificial leather	72
	16.2 Cleaning the housing and the fittings	72
	16.3 Cover of the upholstery	73
17	. Malfunctions (possible causes and troubleshooting)	74
	17.1 Repair	75
18	. Optionally available accessories	76
	18.1 Headrests	76
	18.1.1 Dual headrest	76
	18.2 Gel cushions for nose slots	77
	18.3 Towels for nose slots (disposable cloths)	77

	18.4 Neckrest "Dentalax"	. 78
	18.5 Protective covers	. 79
	18.5.1 Protective covers made of terry	. 79
	18.5.2 Protective covers made of polyurethane (PU)	. 80
	18.5.3 Protective foot cover	. 80
	18.6 Holder for (magnifying) lamps	. 81
	18.7 LED magnifying lamp Circle	. 81
	18.8 Aroma therapy / fragrance generator	. 82
19	9. Upholstery care and cleaning agents	. 84
	19.1 mikrozid * sensitive (alcohol-free)	. 84
	19.2 Skai cleaner	. 86
2	O. Conditions of transport, storage, and operation	. 87
	20.1 Transport	. 87
	20.2 Ambient conditions for storage and transport	. 87
	20.3 Ambient conditions for operation	. 87
2	1. Technical Data	. 88
2	2. Disposal	. 90
2	3. Warranty	. 91
	23.1 Exclusions from warranty	. 91
2	4. EC-Declaration of Conformity	. 92
2	5. Status of Edition	92



Do not dispose of the MLR SELECT together with your domestic waste. The Spa Table must be disposed of at a collecting centre for recyclable electric and electronic appliances.

Do not remove the symbol / stickers from the MLR SELECT.

1. Safety information

You must always observe basic safety precautions, including the following, when operating electrical products, especially when children are nearby:

READ THE COMPLETE SAFETY INFORMATION AND SAFETY INSTRUCTIONS CAREFULLY BEFORE YOU OPERATE THE MLR SELECT FOR THE FIRST TIME.

All information included in those pages serve for the protection of the operator. If you ignore the safety information and safety instructions, you will endanger your health and life and as the health and life of your clients.

MAKE SURE THAT THIS MANUAL IS AVAILABLE TO ANYONE USING THE GHARIENI SPA TABLE MLR SELECT AND MAKE SURE THAT IT HAS BEEN READ AND UNDERSTOOD PRIOR TO USING THE SPA TABLE.

- ➤ This instruction manual is an integral part of the product and must be carefully kept in a safe place to consult it throughout the equipment service life. Copies of this instruction manual are available upon request.
- ➤ The Gharieni Group GmbH shall not be held responsible for any damages, direct or indirect, caused to people, animals or objects resulting from negligence or non-compliance with the instructions contained herein.
- ➤ Before you dispose of a Spa Table or any old appliance, **render it inoperative**. Unplug the Spa Table / appliance and cut off the entire power cord. Dispose of the power cord and the plug immediately.
- ★ Store this manual in a safe place so you can use it whenever it is needed. Strictly observe the instructions to avoid damage to persons and property.

1.1 Abbreviations

MLR SELECT	➤ GHARIENI SPA TABLE MLR SELECT ALU / MLR SELECT WOOD / MLR SELECT STATIC / MLR SELECT VINTAGE / MLR SELECT K8 / MLR SELECT K8 with warming drawer / MLR SELECT ELLIPSE with or without storage space
	➤ OPERATING ADVICE / TIP

1.2 Signal words

DANGER! indicates a hazardous situation which, if ignored, will result in death or serious injury.

⚠ **CAUTION!** indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.

▲ WARNING! indicates a hazardous situation which, if ignored, could result in death or serious injury.

NOTICE! indicates a hazardous situation which, if not avoided, may result in damage to the Spa Table / appliance.

1.3 Safety instructions

△ DANGER

To reduce the risk of electrocution:

- 1. Non-compliance with the orders of this instruction manual endangers the operator's and customer's health and life and / or can damage the spa table.
- 2. All electrical work to connect the MLR Select to the mains must be carried out by a qualified professional. Do not modify the energy supply. The connection must be carried out in accordance with the current local and legal regulations. RISK OF ELECTRIC SHOCK!
- 3. The current voltage and the power frequency of the power supply **must** correspond to the values indicated on the rating plate.
- 4. Do **not** make any changes or manipulations to the MLR SELECT and/or its power supply (mains cable, mains plug). In case of unauthorised changes or manipulations, **any** warranty of the Gharieni Group GmbH is excluded.
- Do not connect the MLR SELECT to the mains if the Spa Table itself or the power cable or the plug are visibly damaged. RISK OF ELECTRIC SHOCK!

- 6. The power supply cable shall not be placed below the MLR SELECT except it is expressly permitted by Gharieni Group GmbH.
 RISK OF ELECTRIC SHOCK!
- 7. The power cord must not be placed close to the actuators during connection or repositioning as it can be damaged while operating the lifting columns/actuators. RISK OF ELECTRIC SHOCK!
- 8. Never try to repair the MLR SELECT yourself. If the MLR SELECT does not operate properly, please contact Gharieni Group GmbH or the dealer you purchased the MLR SELECT at. Original spare parts should be used only.
- 9. If the power cable and / or the plug are damaged, it must be replaced by Gharieni Group GmbH or an authorized aftersales service or a qualified professional only. Never try to repair or replace the power cable and / or the plug yourself. RISK OF ELECTRIC SHOCK!
- 10. Always unplug the MLR SELECT if it is not used for a longer period.
- 11. Always disconnect the MLR SELECT from the mains **before** cleaning and / or maintenance. RISK OF ELECTRIC SHOCK!
- 12. **Never** pull the power supply cable to unplug the MLR SELECT. Always use the power plug itself to unplug the MLR SELECT. RISK OF ELECTRIC SHOCK!
- 13. **Never** touch the power plug, the power switch, or other electrical components with wet or damp hands. RISK OF ELECTRIC SHOCK!
- 14. Do not place or store the MLR SELECT close to a source of liquid such as a bath, a shower, or a washbasin. There is danger that the MLR SELECT may meet splashed water. RISK OF ELECTRIC SHOCK!

⚠WARNING!

To reduce the risk of burns, electrocution, fire, or injury to persons:

- 1. Use a properly secured safety socket with the appropriate mains voltage and power frequency. See technical data and rating plate.
- 2. The electric components must not meet water. RISK OF ELECTRIC SHOCK!
- 3. Check all cables regularly and contact our customer service department if any cable is in improper condition. RISK OF ELECTRIC SHOCK!
- 4. The MLR SELECT must not stand on the power cord. Ensure that the cord is not damaged when moving the MLR SELECT. Do not step on the cord. Do not stretch the cord.

- 5. Always ensure that the power cord is not bent or squeezed during installation.
- 6. **Do not** use any extension cords, multiple sockets, or adapters. RISK OF FIRE!
- 7. **Do not** open the housings of the electric control panels! RISK OF ELECTRIC SHOCK!
- 8. Liquids **must not** get into the electric control panels! RISK OF ELECTRIC SHOCK!
- 9. Do not use water or any other liquids while carrying out any application. Do not spill water or any other liquids over, on or into the MLR Select. Should you spill any water, **immediately** pull the mains plug and dry the MLR Select thoroughly. RISK OF ELECTRIC SHOCK!
- 10. **Never** immerse any parts of the MLR SELECT in water. When cleaning the MLR SELECT, make sure that no water penetrates the MLR SELECT or its housing. RISK OF ELECTRIC SHOCK!
- 11. The cables of the models incl. the heating system and / or the Vibro Wellness 10 function¹ are between the upholstery and the underframe. **The upholstery may only be removed by persons authorized by Gharieni Group GmbH.**
- 12. For MLR SELECT with soft upholstery only: for long periods of use of the heating system (optional equipment), always keep some free space between the back and seat upholstery.

 RISK OF BURNS DUE TO HEAT ACCUMULATION!



- 13. People with acute pain, venous disorders, low blood pressure, inflammatory processes and other medical conditions that make heat applications or this form of client positioning questionable must always consult a doctor before use.
- 14. Never use the MLR SELECT on people who are under the influence of alcohol or drugs.
- 15. Operate or store the MLR SELECT in a dry environment **only**.

_

¹ optional equipment

- 16. Close supervision is necessary if the MLR SELECT is used by, on, or near children or invalids.
- 17. Use the MLR Select only for the intended use as described in this manual. Do not use attachments / accessories not recommended by Gharieni Group GmbH.
- 18. Never operate the MLR SELECT if it has a damaged cord or plug, if it is not working properly, if it has been damaged or if it has become wet. Return the MLR SELECT to an aftersales service authorized by Gharieni Group GmbH for examination and repair.
- 19. In case of defects of the spa table, contact customer service immediately. Use of the spa table must be discontinued until the problem has been solved to avoid further damage to property and persons.
- 20. Regularly remove any dust build-up from the mains plug, the safety socket, and all electrical plug connections, e.g. with a commercially available vacuum cleaner. RISK OF FIRE!
- 21. Keep the cord away from heated surfaces.
- 22. Never drop or insert any object into any opening.
- 23. Do not use the MLR Select outdoors.
- 24. Do not allow any unauthorized person to operate the MLR SELECT!
- 25. Use the MLR SELECT only on a level surface.
- 26. **Do not place** any objects or liquids on the MLR SELECT. The Spa Table as well as the material can be damaged thereby. RISK OF ELECTRIC SHOCK! RISK OF DAMAGE!
- 27. Any repairs and maintenance work must be carried out by qualified professionals authorized by the Gharieni Group GmbH **only**! RISK OF ELECTRIC SHOCK! RISK OF FIRE!
- 28. **Do not use** a steam cleaner for cleaning. RISK OF ELECTRIC SHOCK!
- 29. **Never** rest or stand on any part of the lying surface or of the supporting structure of the MLR SELECT. Do not exert strong physical forces on these components; otherwise you can damage the supporting structure permanently. RISK OF TIPPING! RISK OF BREAKAGE! RISK OF INJURY!
- 30. Persons, animals or body parts of persons and animals **must not** be positioned between the base and the upper structure. RISK OF CRUSHING!
- 31. Ensure that no body parts or items are between the parts of the MLR SELECT while adjusting the lying position. RISK OF CRUSHING!
- 32. **Do not** use the supporting structure as a footrest. RISK OF CRUSHING!
- 33. Always ensure that the MLR SELECT stands firmly on its adjustable feet.

- 34. The MLR Select must **never** be used to carry or transport persons or heavy loads. RISK OF INJURY! RISK OF DAMAGE!
- 35. While unpacking, the packaging materials should be kept away from children, pets, or persons with reduced mental capabilities. RISK OF INJURY! CHOKING HAZARD!
- 36. Always keep children and pets away from the MLR SELECT.
- 37. Children must not play with the MLR SELECT or its single components.
- 38. The MLR SELECT is not intended to be operated by persons with reduced physical, sensory, and mental capabilities or lack of experience or knowledge, unless they are supervised or instructed concerning the use of the MLR SELECT and do understand the danger resulting thereof.

NOTICE!

- 1. The special pallet the MLR SELECT is delivered on has recesses. Upon delivery, the adjustable feet of the MLR SELECT stand in the respective recesses to prevent the Spa Table from inadvertent movement. Therefore, it is essential to lift the MLR SELECT vertically off the special pallet using all four carrying aids. Non-compliance with this instruction can seriously damage the adjustable feet of the MLR SELECT. RISK OF DAMAGE!
- For safety reasons, the MLR SELECT moves only while pressing a button of the hand control, of the optional foot control with Bluetooth or one or more pedals of the optional foot control. When you stop pressing, all moving-operation will stop immediately.
- 3. **Never** rest, stand, or kneel on any part of the lying surface of the MLR SELECT. Do not exert strong physical forces on the lying surface; otherwise you can damage the upholstery permanently. RISK OF DAMAGE!
- 4. Do not lean, stand, or sit on the armrests or headrest; otherwise you can damage the armrests or headrest permanently! RISK OF DAMAGE!
- 5. The maximum load capacity of the armrests is 25 kg.
- 6. To prevent unauthorized use of the MLR Select, always lock the drives manually using the hand control or the optional foot control when leaving the treatment room. No automatic locking is set as standard. You can decide for yourself whether to change this. Manual locking does not affect the heating cycle currently running and has no effect on the operation of the heating system. The heating cycle currently running is not affected by automatic locking.

7. The rating plate must not be removed or made illegible.

Non-compliance will expire the warranty!

READ THESE INSTRUCTIONS CAREFULLY AND SAVE THESE INSTRUCTIONS.

2. Intended Use

- Read the instructions very carefully and **only** operate the Spa Table in the intended use as described to protect you and your customers from danger.
- ❖ The Gharieni MLR SELECT is a spa table.
 The Gharieni Spa Table MLR SELECT is **no** medical device.
- ❖ The MLR SELECT is a versatile Spa Table. You can use it for e.g. cosmetic applications or full body massages in dry rooms, etc.
 - Any other use is not permitted and will affect the warranty claims.
- ❖ The MLR SELECT is intended for use in closed rooms with defined ambient conditions. See chapter 20. CONDITIONS OF TRANSPORT, STORAGE, AND OPERATION.
- **★** No liability for personal injury or material damage will be accepted if these instructions are not followed.

3. Scope of Delivery

- 1 SPA TABLE MLR SELECT in desired design and equipment
- ➤ 1 HAND CONTROL
- ► 4 CARRYING AIDS
- ➤ 1 INSTRUCTION MANUAL
- If you have purchased additional optional accessories for your Spa Table, these are also included in the scope of delivery.

4. Preliminary remarks

- ❖ The Gharieni Spa Table MLR SELECT is subject to the highest safety and quality standards.
- ❖ Before first use, make sure that all parts are present and that there is no visible damage.
- ❖ Make sure that the socket for the spa table is properly grounded and has the correct mains voltage and mains frequency, see rating plate.



Before setting up, make sure that there is enough space for the MLR Select so that it does not bump into anything even when fully extended.

5. Delivery and unpacking of the MLR SELECT

5.1 Delivery

❖ The MLR SELECT is delivered and packed in a cardboard on a special pallet (s. fig. below). The MLR SELECT is in complete horizontal position and the upholstery is installed.



DELIVERY BY THE GHARIENI GROUP GMBH:

If the MLR SELECT is delivered by the Gharieni Group GmbH, the driver will **help** with the installation of the MLR SELECT and will also dispose of the packaging material and the special pallet.

DELIVERY BY AN EXTERNAL FORWARDER:


If the MLR SELECT is delivered by an external forwarder, the MLR SELECT is normally delivered **only** (no help with the installation of the MLR SELECT). In this case, you must dispose of the packaging material and the special pallet on your own responsibility.

5.2 Unpacking

D

⚠ **WARNING!** While unpacking, the packaging should be kept away from children and pets. RISK OF INJURY! CHOKING HAZARD!

❖ The MLR SELECT is delivered and packed in a cardboard on a special pallet (s. fig. below).

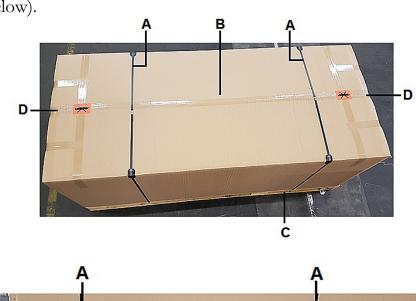

A	PACKAGING TAPES
В	UPPER CARDBOARD
С	SPECIAL PALLET

1. Cut the packaging tapes (A) with scissors and remove them.

SHORT SIDES OF THE CARDBOARD

R

- 2. **<u>DO NOT</u>** open the upper cardboard (**B**) but lift it carefully and vertically as a whole from the MLR SELECT and from the special pallet (**C**). For this purpose, you will need two persons; one person each on the short sides (**D**) of the cardboard.
- 3. Dispose of the cardboard properly.
- 4. Now you can move the MLR SELECT from the special pallet; **strictly observe** the instructions given in chapter 6.2 Transport / Carrying aids and chapter 6.2.1 Use of the Carrying aids when doing so.

6. Assembly and transport of the MLR SELECT

6.1 Assembly

The MLR SELECT is usually delivered fully assembled, so no assembly work is necessary. In **exceptional cases**, necessary assembly work will be carried out by the deliverer on site.

The MLR SELECT is easy to install and can be adapted to all human body measurements. You can adjust the desired positions electrically in a very short period and then focus entirely on your customer.

Before setting up, make sure that there is enough space for the MLR Select so that it does not bump into anything even when fully extended.

⚠ WARNING! The cables of the models incl. the heating system and / or the Vibro Wellness 10 function are between the upholstery and the underframe. The upholstery may only be removed by persons authorized by Gharieni Group GmbH!

6.2 Transport

Transport of the MLR SELECT can be severely affected to some extent due to unfavourable environmental conditions. Such unfavourable environmental conditions are e.g. narrow doors, narrow corners behind doors, narrow corridors, narrow staircases, spiral staircases etc. The weight of the MLR SELECT is approx. 120 kg to 150 kg (depending on the design of the base); the length is approx. 200 cm and the width including the upholstery is 76 cm / 80 cm/85 cm or 92 cm²; thus, the manoeuvrability of the MLR SELECT is limited

² Small / MediumSmall / Medium / Large

CARRYING AIDS:

- You need the carrying aids (s. fig. below) to lift the MLR SELECT from the special pallet. The proper use of the carrying aids is described below in chapter 6.2.1.
- You need 4 persons to move or transport the MLR SELECT using the carrying aids.



Fig. similar: fig shows 2 of a total of 4 carrying aids.

6.2.1 Use of the carrying aids


▲ DANGER! After transport, while putting down the MLR SELECT, the power cord must not be under the Spa Table; otherwise the adjustable feet may squeeze the power cord and cause permanent damage while putting down the MLR SELECT. RISK OF ELECTRIC SHOCK!


NOTICE! The special pallet the MLR SELECT is delivered on has recesses (s. fig. below). Upon delivery,

the adjustable feet of the MLR SELECT stand in the respective recesses to prevent the Spa Table from inadvertent movement. **Therefore, it is essential to lift the MLR SELECT** <u>vertically</u> off the special pallet using all four carrying aids. Non-compliance can damage the adjustable feet of the MLR SELECT seriously. RISK OF DAMAGE!



- i Figures similar: all following figures serve as an example only.
- 1. To move the MLR Select from the special pallet, you must raise the MLR SELECT first. Plug in the MLR Select to do this. Then press the corresponding push button of the hand control which is on one side on a suspension device / (button T 1, s. fig. in chapter 11.1 HAND CONTROL WITH MEMORY resp. chapter 11.2 HAND CONTROL WITHOUT MEMORY).
- 2. You must set the **backrest** in upright position before you use the carrying aids. To do this, press the corresponding push button of the hand control (**button T 2**, s. fig. in chapter 11.1 s. fig. in chapter 11.1 HAND CONTROL WITH MEMORY resp. chapter 11.2 HAND CONTROL WITHOUT MEMORY).
- 3. Then unplug the MLR SELECT.
- 4. Insert the 4 carrying aids (**A**) into the intended openings (**B** / 2 front left, 2 front right, 2 back left, 2 back right) underneath the lying surface (**C**); s. fig. below.

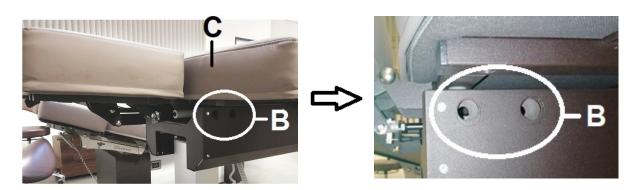

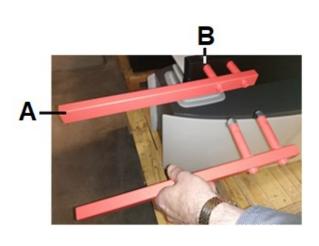



A	CARRYING AIDS	
В	OPENINGS FOR THE CARRYING AIDS	
С	LYING SURFACE	

- 5. You need **4 persons** to move the MLR SELECT to its final site.
- 6. It is essential to **lift** the MLR SELECT <u>vertically</u> off the special pallet using **all four** carrying aids. Otherwise you damage the adjustable feet.
- 7. Carry or transport the MLR SELECT using all four carrying aids only; otherwise you can damage the MLR SELECT irreparably.
- 8. Store the carrying aids in a safe place. If the MLR SELECT must be carried or transported at a later point of time (e.g. when moving), it is only possible when using the four carrying aids.
- 9. If the floor is not level, you must ensure proper stability of the MLR SELECT by adjusting the four adjustable feet (**D** /s. fig. below). After you have adjusted the feet, they must be secured by tightening the respective lock nut (**E**); see fig. below.



D	Adjustable foot
${f E}$	LOCK NUT

NOTICE! Once you have found a suitable place with enough space for the bed, remove the carrying aids and store them well for possible later transport!

NOTICE! If the floor is not level, you **must** ensure proper stability of the MLR SELECT by adjusting the four adjustable feet.

7. Rating plate

- ❖ The rating plate is located at the head end of the MLR SELECT; on the wooden plate below the backrest (see figure below).
- ➤ To gain access to the rating plate, you must set the backrest of the MLR SELECT into an upright position.
- Do not make the rating plate illegible! Do not remove the rating plate! Noncompliance will expire the guarantee!

If you wish to contact the Gharieni customer service regarding your Spa Table, we recommend taking a photo of the rating plate previously (e.g. using a mobile phone or a digital camera). This makes it easier for you to identify the information of the rating plate (e.g. the serial number of the Spa Table) to provide the required information to the customer service. On the cover page of this instruction manual is an area in which you can note the serial number of your Spa Table; this way you have the serial number always at hand.



- 1. Set the backrest to an upright position (**button T 2** of the hand control (s. figure in chapter 11.1 HAND CONTROL WITH MEMORY FUNCTION or chapter 11.2 HAND CONTROL WITHOUT MEMORY FUNCTION).
- 2. The first indication on the rating plate (A) is the serial number.



A

RATING PLATE

(Figure similar, position might differ)

8. QR-Code


In case of service, you can scan the QR code using the OCR scan function of a suitable device (e.g. a smartphone). A form will then open via the Internet browser of your device, which already automatically contains the serial number of your MLR Select. Please describe your problem there and enter your data. You can attach a file from your device memory or take a photo with your device and attach it. To do this, tap on the "Select file" button.

F

A window with options will then open. The appearance of this window may differ from the illustration, depending on your device and operating system.

After you have confirmed that you have read our data protection guidelines by marking the box at the end of the form, the form with all the entries you have made is immediately sent to our customer service department by clicking "Send".

- ❖ The QR-Code is located at the head end of the MLR SELECT; on the wooden panel below the backrest.
- ➤ To gain access to the QR-Code, you must set the backrest of the MLR SELECT into an upright position.

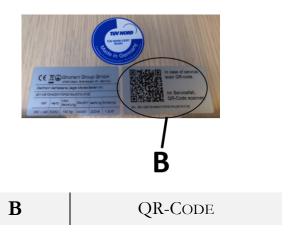

(Figure similar, position might differ)

Ν		plett wie im Typenschild) / mplet comme inscrit sur la plaque d'identification)
	KoM4-3A-M1-SUPE	ERSOFT-SM-RAL9007-0530
Ρl	lease describe the i	ssue* (Required Field) /
Bi	itte schildern Sie da	s Problem * (Pflichtfeld) /
Ve	euillez s´il vous plai	décrire le problème* (Champ obligatoire)
Ad	dd file: / Datei hinzı	ufügen: / Ajoutez un fichier:
	Datei auswählen	Keine ausgewählt
		Adresse / Votre adresse
Fi	our address / Ihre frst and last name* (or- und Zuname * (F rénom et nom* (Cha	Required Field) /
Fii Vo Pr	irst and last name* (or- und Zuname * (F	Required Field) / Pflichtfeld) / amp obligatoire)
Fin Vo	rst and last name' (or- und Zuname ' (F rénom et nom' (Cha	Required Field) / Pflichtfeld) / amp obligatoire)
Fii Vo	irst and last name* (or- und Zuname * (F rénom et nom* (Cha ompany / Firma / E treet adress / trasse und Hausnur	Required Field) / Pflichtfeld) / amp obligatoire) Entreprise
Fin Vo	irst and last name* (or- und Zuname * (F rénom et nom* (Cha ompany / Firma / E	Required Field) / Pflichtfeld) / amp obligatoire) Entreprise
Fii Vo	irst and last name* (or- und Zuname * (F rénom et nom* (Cha ompany / Firma / E treet adress / trasse und Hausnur	Required Field) / Pflichtfeld) / Imp obligatoire) Entreprise nmer / e

Figure shows form that opens in the Internet browser of the device after the QR code is scanned.

I	amp obligatoire)		
City* (Required F			
Stadt* (Pflichtfel			
Ville* (Champ of	igatoire)		
E-Mail-Adress* (equired Field) /		
E-Mail-Adresse*	Pflichtfeld) /		
Votre adresse e	mail* (Champ obligatoire)		
Phone number*	Required Field) /		
Telefonnummer			
Téléphone* (Cha			
Ich habe die <u>Da</u>	vacy policy of the Gharieni Gr enschutzrichtlinien der Gharie onnées du Groupe Gharieni.	or> J'ai lu la	
CENID			
SEND			

Figure shows form that opens in the Internet browser of the device after the QR code is scanned.

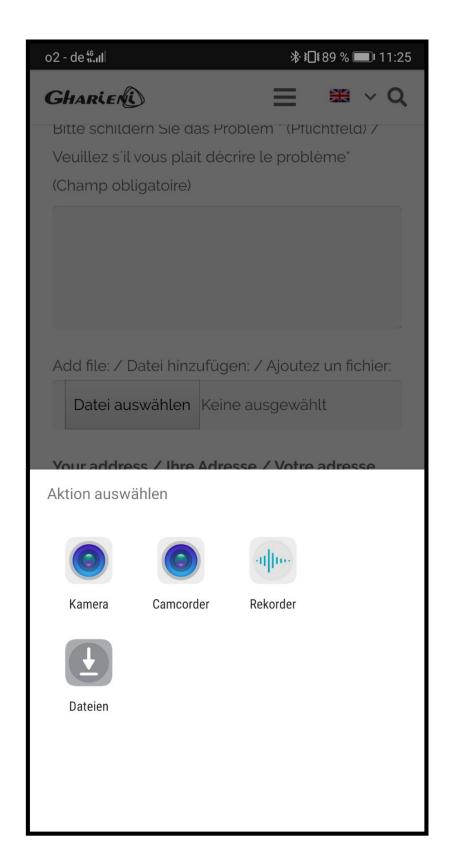


Figure similar: option window for adding a file.

Appearance may vary depending on the device and operating system.

9. Upholstery and design of the MLR SELECT

9.1 Upholstery

- ❖ The MLR SELECT is available in **two** upholstery variants (standard upholstery / soft upholstery / s. below).
- ❖ The upholstery of the MLR SELECT is made of **polyurethane** (**PU**).

STANDARD UPHOLSTERY MADE OF POLYURETHANE (PU):

- ❖ The MLR SELECT can be equipped with a soft, comfortable, and high-quality one-piece upholstery (s. fig. below).
- ❖ The inner material of the upholstery is made of high-quality foam material.
- ❖ The upholstery is made of **polyurethane** (**PU**) and available in various colours.
- ❖ PU is more elastic and provides perfect and "soft" lying comfort. Furthermore, it is easy to clean. It is oil proof, waterproof and washable up to 90 °C.



Fig. similar: colour and decor can vary depending on model.

SOFT UPHOLSTERY MADE OF POLYURETHANE (PU):

- ❖ The MLR SELECT can be equipped with an **extra soft**, comfortable, and high-quality one-piece upholstery (without illustration).
- * The inner material of the upholstery is made of high-quality foam material.
- ❖ The upholstery is made of **polyurethane** (**PU**) and available in various colours.
- ❖ PU is more elastic and provides perfect and "soft" lying comfort. Furthermore, it is easy to clean. It is oil proof, waterproof and washable up to 90 °C.

9.2 Versions of the base

❖ The MLR SELECT is available with eight different versions of the base.


MLR SELECT WOOD:

❖ The base of the MLR SELECT WOOD consists of a solid plate with elegant wooden decor (s. fig. below).



MLR SELECT ALU:

❖ The base of the MLR SELECT ALU consists of a solid aluminium plate. (s. fig. below).

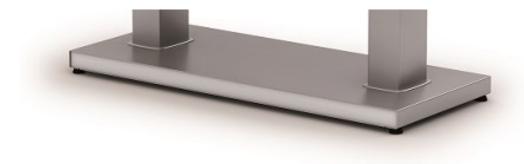

MLR SELECT STATIC:

The base of the MLR SELECT STATIC is intended to be bolted to the floor. This kind of installation offers spacious legroom and maximum stability (s. fig. below).



MLR SELECT VINTAGE:

The base of the MLR SELECT VINTAGE in an exclusive metal-wood look offers extensive space for towels and everything else you need for your work (s. fig. below).



MLR SELECT K8:

❖ The base of the MLR SELECT K8 is equipped with storage compartments and optionally with an integrated warming drawer (s. fig. below).





MLR SELECT ELLIPSE:

The base of the MLR SELECT ELLIPSE is available with or without storage compartment (s. fig. below).





10. Operation of the MLR SELECT

MARNING! Do not sit on the headrest and armrests.

⚠ WARNING! Do not, under any circumstances, exert physical force on the above-mentioned components, regardless of the lying surface setting. Non-compliance with this instruction may permanently damage the support structure of the MLR SELECT. RISK OF TIPPING! RISK OF BREAKAGE! RISK OF INJURY!

10.1 Characteristics

- ❖ The MLR SELECT is a versatile Spa Table. You can use it for e.g. cosmetic applications or full body massages in dry rooms, etc.
- ❖ The MLR SELECT is available with eight different versions of the base (MLR SELECT WOOD / MLR SELECT ALU / MLR SELECT STATIC / MLR SELECT VINTAGE / MLR SELECT K8 with or without warming drawer / MLR SELECT ELLIPSE with or without storage space / see also chapter 9.2 VERSIONS OF THE BASE).
- ❖ The MLR SELECT is available in two upholstery variants (s. chapter 9.1 UPHOLSTERY).
- ❖ The entry height of the MLR SELECT (**soft upholstery**) is approx. **+ 5 cm** compared to the other upholstery variants due to the thicker upholstery.
- ❖ The Gharieni MLR SELECT is a Spa Table with four, five or six actuators (s. chapter 10.2 MODEL VARIANTS / NUMBERS OF ACTUATORS), which allow you to adjust the table with a hand control, an optional foot control or an optional foot control with Bluetooth.

- ❖ Frequently used treatment positions can be saved by two individually adjustable and storable memory locations (s. chapter 10.2 MODEL VARIANTS / NUMBER OF ACTUATORS) using the hand control (s. chapter 11.1.5 MEMORY FUNCTIONS OF THE HAND CONTROL).
- The MLR SELECT is available in various widths (SMALL, MEDIUMSMALL, MEDIUM, LARGE / s. chapter 10.2 MODEL VARIANTS / NUMBER OF ACTUATORS). MLR SELECT K8 and Vintage are available only in MEDIUM and LARGE. Ellipse is available only in MEDIUM.
- ❖ Working height, backrest, the inclination of the seat section and the adjustment of the Trendelenburg / anti-Trendelenburg function are electrically adjustable, s. chapter 11. ADJUSTMENTS OF THE MLR SELECT.

 The inclination of the seat section is adjustable by the electrically adjustable knee bend.
- ❖ The armrests can be adjusted pneumatically; s. chapter 10.7 ARMRESTS.
- ❖ The headrest can be adjusted pneumatically; s. chapter 10.6 HEADREST.
- ❖ The maximum lifting capacity of the MLR SELECT is approx. 300 kg.
- ❖ The maximum load capacity of the lying surface of the MLR SELECT is approx. 350 kg.
- ❖ The maximum load capacity of the armrests is 25 kg.

10.2 Model variants / Number of actuators

- ❖ The Spa Tables of the Gharieni MLR SELECT series are available in four various widths: SMALL 76 CM / MEDIUMSMALL 80 CM / MEDIUM 85 CM / LARGE 92 CM. MLR SELECT K8 and Vintage are available only in MEDIUM and LARGE. Ellipse is available only in MEDIUM.
- The Spa Tables of the Gharieni MLR SELECT series can be equipped with four, five or six actuators, which allow you to adjust the table using a hand control, an optional foot control or an optional foot control with Bluetooth.

10.2.1 MLR SELECT / 4 actuators:

MLR SELECT / 4 ACTUATORS:		
2 lifting columns	Electrical adjustment of the WORKING HEIGHT. Electrical adjustment of the TRENDELENBURG / ANTI-TRENDELENBURG FUNCTION	
Actuator 1	Electrical adjustment of the BACKREST.	
Actuator 2	Electrical adjustment of the INCLINATION OF THE SEAT SECTION: adjustable by the electrically adjustable KNEE BEND.	

➤ The LEGREST is **not** adjustable.

10.3 Before first use

- ➤ Before first use, please check that all components are present (s. chapter 3. SCOPE OF DELIVERY) and that they are not visibly damaged.
- Make sure that the socket for the spa table is properly grounded and has the correct mains voltage and mains frequency, see rating plate.

10.4 View (example: MLR SELECT ALU)

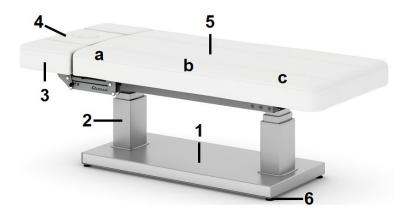


Fig. similar: colour, design and equipment may vary depending on model.

1	BASE
2	 HEIGHT ADJUSTMENT / INCLINATION ADJUSTMENT: S. chapter 11.1.1 resp. chapter 11.2.1 ADJUSTMENT OF THE WORKING HEIGHT ▶ s. chapter 11.1.4 resp. chapter 11.2.4 ADJUSTMENT OF THE TRENDELENBURG / ANTI-TRENDELENBURG FUNCTION
3	ARMRESTS: ➤ Pneumatically adjustable and swivelling. ➤ s. chapter 10.5 GAS SPRINGS and chapter 10.7 ARMRESTS
4	 HEADREST: ➤ Pneumatically adjustable. ➤ Incl. nose slot. ➤ s. chapter 10.5 GAS SPRINGS and chapter 10.6 HEADREST

5	 LYING SURFACE, DIVIDED INTO: a. Electrically adjustable backrest ➤ s. chapter 10.9 BACKREST and chapter 11.1.2 resp. chapter 11.2.2 ADJUSTMENT OF THE BACKREST b. Knee bend (inclination of the seat section) ➤ The INCLINATION of the seat section is adjustable by the electrically adjustable KNEE BEND. ➤ s. chapter 11.1.3 resp. chapter 11.2.3 ADJUSTMENT OF THE INCLINATION OF THE SEAT SECTION c. Legrest ➤ The legrest is not adjustable.
6	ADJUSTABLE FEET: s. chapter 6. ASSEMBLY AND TRANSPORT OF THE MLR SELECT

10.5 Gas springs

- ❖ The armrests as well as the headrest can be adjusted pneumatically using a gas spring using a lever.
- ❖ If you carry out any setting using the lever of the gas spring, you **only** need to operate the lever **when** <u>lowering</u> the armrests or headrest.
- Carry out a pulling movement upwards (<u>without</u> operation of the respective lever) to lift an armrest and / or the headrest again.

10.6 Headrest

⚠ **WARNING!** Do not carry out any physical force to the headrest, regardless of the setting of the lying surface.

Non-compliance can cause permanent damage to the construction of the MLR Select. RISK OF TIPPING! RISK OF DISINTEGRATION! RISK OF INJURY!

- The headrest is freely and manually adjustable (s. below: fig. 1, 2 and 3).
- You can incline the headrest (positive by 35° and negative by 48°) using the lever, which is on the underside of the headrest (**fig. 1**). Lock the set position by releasing the lever.
 - > see also chapter 10.5 GAS SPRINGS



FIG. 1



FIG. 2



FIG. 3

Fig similar: figures serve as an example only.


- The upholstery of the headrest is equipped with a nose slot usable when carrying out back massages. For this purpose, the headrest is equipped with a separate upholstery part, which can be removed (s. below: **fig. 4**).
- ❖ Using a gel cushion (s. **fig. 5**, optionally available at Gharieni) on the headrest upholstery can additionally support the face of the person to be treated (see also chapter 18.1 GEL CUSHION FOR NOSE SLOTS).



Fig similar: figures serve as an example only.


10.6.1 Headrest versions

- For the MLR Select, the dual headrest is available as an option, at extra cost.
 - This headrest has a round and a horn-shaped face support; see fig. 6.
 - The scope of delivery of the dual headrest includes an air cushion with hand pump, which allows individual adjustment of the height of the respective face support (see figs. 7, 8 and 9).

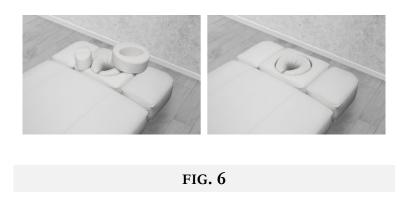

- Both face supports of the dual headrest have a nose opening.

 To obtain the nose opening on the round face support, please remove the separate oval upholstery part.
 - > see also chapter 18.1 HEADRESTS.

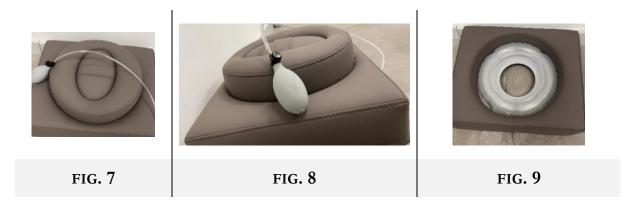

The NECKREST "DENTALAX" is optionally available for the MLR SELECT. The NECKREST "DENTALAX" supports the cervical spine effectively and will increase the comfort of lying significantly (see also chapter 18.4 NECKREST "DENTALAX").

NOTICE! Do not lean, stand, or sit on the headrest; otherwise you can damage the headrest permanently! RISK OF DAMAGE!

10.7 Armrests

⚠ **WARNING!** Do not carry out any physical force to the armrests, regardless of the setting of the lying surface.

Non-compliance can cause permanent damage to the construction of the MLR Select. RISK OF TIPPING! RISK OF DISINTEGRATION! RISK OF INJURY!

- ❖ You can lower and lift each armrest in the same way as the headrest (manually, gas spring / see also chapter 10.5 GAS SPRINGS).
- ❖ Additionally, the armrests of the MLR SELECT can also be swivelled and locked in at 45° and at 90°.
- ❖ Use the lever of the relevant side and press lightly to adjust the armrests freely; so the MLR SELECT is the optimal solution for back massages (s. **fig. 10**).
- As you can swivel the armrests, you are closer to the head of the person to be treated when carrying out cosmetic or facial massages.



FIG. 10

Fig similar: figures serve as an example only.

NOTICE! Swivel the armrests without load only! Do not lean, stand, knee, or sit on the armrests; otherwise you can damage the armrests permanently. RISK OF DAMAGE!

NOTICE! The maximum load capacity of the armrests is 25 kg. RISK OF DAMAGE!

10.7.1 Additional locking of the armrests

- The armrests of the MLR SELECT can be locked **additionally** using the laterally-mounted locking button (s. fig. below).
- ❖ The additional lock enables higher stability and safety of the armrests.

LOCKING OF THE ARMRESTS:

- 1. **Push** the inner **red** button **inward** to lock the armrests.
- 2. Now the armrests are locked.

UNLOCKING OF THE ARMRESTS:

- 1. **Pull** the outer **black** button **forward** (towards you) to unlock the armrests.
- 2. The additional lock of the armrests is released.



NOTICE! The additional lock <u>must</u> be released to adjust the armrests using the respective levers (s. chapter 10.7 ARMRESTS). Otherwise the construction and the mechanics of the armrests can be damaged permanently. RISK OF DAMAGE!

10.8 Legrest

i The legrest is **not** adjustable.

10.9 Backrest

❖ The backrest can be adjusted electrically, s. chapter 11.1.2 resp. 11.2.2 ADJUSTMENT OF THE BACKREST.

11. Adjustments of the MLR SELECT

- ❖ The electrical adjustments of the MLR SELECT are carried out using a hand control, an optional foot control or an optional foot control with Bluetooth.
- ❖ The pneumatic adjustments of the MLR SELECT (armrests / headrest) are carried out using a gas spring using a lever.
- If you have decided on the VIBRO WELLNESS OPTION, an hand control is included in delivery (s. chapter 14. VIBRO WELLNESS 10).



For safety reasons, the MLR SELECT moves only while pressing a button of the hand control. When you stop pressing, all moving-operation will stop immediately.

11.1 Hand control with memory function (optional)

The hand control is a wired control.

This enables the operation of the electrically controllable functions.

- ❖ You can control the two lifting columns and the actuators by pressing and holding down the corresponding push button.
- ❖ Furthermore, you can individually adjust and save two memory positions. Saving of certain lying positions is described in chapter 11.1.5 MEMORY FUNCTIONS OF THE HAND CONTROL.
- * Recalling the four preset positions is also possible.
- ❖ The hand control has 12 buttons.
- Adjustment of the working height, the backrest, the seat tilt, and the Trendelenburg / anti-Trendelenburg function (buttons T 1 T 4) is done by a double-tap system. This is for safety reasons.


A movement that is associated with danger is made <u>consciously</u> by this.

For the direction of movement, please note the arrow symbols and the number of dots in the upper area of the hand control.

By <u>simply</u> pressing a button and keeping it pressed, a movement is made upwards.

By pressing a button <u>twice</u> (double-tap system) and keeping it pressed, a movement is made in the opposite direction.

The two individually storable positions and the de-activation of the locking function are also done via the double-tap system.

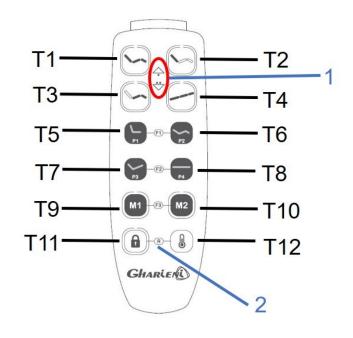

Т1	Button for adjustment of the WORKING HEIGHT			
T 2	Button for adjustment of the BACKREST			
Т 3	Button for adjustment of the INCLINATION (seat area)			
T 4	Button for adjustment of the TRENDELENBURG / ANTI-TRENDELENBURG FUNCTION			
Т 5	 PROGRAM BUTTON P1 moves the bed to the fixed entry position. ➤ The fixed entry position cannot be changed. 			
Т 6	 PROGRAM BUTTON P2 moves the bed to the fixed S-curved position. ➤ The S-curved position cannot be changed. 			
Т7	 PROGRAM BUTTON P3 moves the bed to the fixed pedicure position. ➤ The pedicure position cannot be changed. 			

Т8	 PROGRAM BUTTON P4 moves the bed to the fixed massage position. The massage position cannot be changed.
Т 9	 MEMORY BUTTON M1 is used to save and recall the first individually adjusted and saved position.
T 10	MEMORY BUTTON M2 is used to save and recall the second individually adjusted and saved position. MEMORY BUTTON M2 is used to save and recall the second individually adjusted and saved position.
T 11	LOCK BUTTON ➤ The LOCK BUTTON locks and unlocks the hand control / the actuators.
T 12	 BUTTON FOR THE HEATING SYSTEM (optional) By using this button you can switch on the heating system, set it in 3 levels and switch it off again.

1	 SYMBOLS FOR THE DOUBLE-TAP SYSTEM The working height, backrest, inclination of the seat area and Trendelenburg / anti-Trendelenburg function (buttons T 1 - T 4) are adjusted using the double-tap system. This serves for safety. A movement associated with danger is made consciously by this.
2	 SYMBOL FOR RESET ❖ Press buttons T 11 + T 12 on the hand control simultaneously and keep them pressed. ❖ See chapter 15. RESET. ❖ A reset procedure is only possible in the event of a system error.

11.1.1 Adjustment of the working height

- ❖ For adjustment of the WORKING HEIGHT press the corresponding button (**T 1**); s. fig. in chapter 11.1 HAND CONTROL WITH MEMORY FUNCTION.
- ❖ For the direction of movement, please note the arrow symbols and the number of dots above them on the hand control.
- ❖ Press the button once and hold it down to raise the MLR SELECT.

 Press the button twice and hold it down to lower the MLR SELECT.
- The horizontal WORKING HEIGHT of the MLR SELECT **STATIC, WOOD, VINTAGE, K8 and ELLIPSE** is adjustable from approx. 61 cm up to approx. 91 cm (if the adjustable feet are retracted).
- ❖ The horizontal WORKING HEIGHT of the MLR SELECT **ALU** is adjustable from approx. 63 cm up to approx. 93 cm (if the adjustable feet are retracted).
- The horizontal WORKING HEIGHT of the MLR SELECT **STATIC, WOOD, VINTAGE, K8 and ELLIPSE** (**soft upholstery**) is adjustable from approx. 66 cm up to approx. 96 cm, due to the thicker upholstery (if the adjustable feet are retracted).
- * The horizontal WORKING HEIGHT of the MLR SELECT ALU (soft upholstery) is adjustable from approx. 68 cm up to approx. 98 cm, due to the thicker upholstery (if the adjustable feet are retracted).
- Extracting of the adjustable feet (up to 3 cm) will increase the WORKING HEIGHT a bit.

- The ENTRY HEIGHT is the lowest position of the seat / seat section.

 At this height, your customer has easy access to the MLR SELECT from the side.
- ➤ <u>MLR SELECT STATIC, WOOD, VINTAGE, K8, ELLIPSE</u> = approx. 61 cm / seat (seat section) in horizontal position
- ➤ MLR SELECT ALU = approx. 63 cm / seat (seat section) in horizontal position
- ➤ MLR SELECT STATIC, WOOD, VINTAGE, K8, ELLIPSE (soft upholstery) = approx. 66 cm / seat (seat section) in horizontal position
- ➤ MLR SELECT ALU (soft upholstery) = approx. 68 cm / seat (seat section) in horizontal position

11.1.2 Adjustment of the backrest

- * The inclination of the backrest can also be adjusted using the hand control.
- ❖ For adjustment of the backrest press the corresponding button (**T 2**); s. fig. in chapter 11.1 HAND CONTROL WITH MEMORY FUNCTION).
- ❖ For the direction of movement, please note the arrow symbols and the number of dots above them on the hand control.
- ❖ Press the button once and hold it down to raise the backrest of the MLR SELECT. Press the button twice and hold it down to lower the backrest of the MLR SELECT.

⚠ WARNING! Ensure that no body parts or items are between the parts of the MLR SELECT while adjusting the treatment position. RISK OF CRUSHING!

11.1.3 Adjustment of the inclination of the seat section

- ❖ Via the electrically adjustable knee bend the inclination of the seat section (thigh section to knee bend section) can also be adjusted using the hand control.
- ❖ For adjustment of the inclination of the seat section press the corresponding button (**T 3**); s. fig. in chapter 11.1 HAND CONTROL WITH MEMORY FUNCTION).
- ❖ For the direction of movement, please note the arrow symbols and the number of dots above them on the hand control.
- ❖ Press the button once to move up or twice to move down and hold it down to adjust the inclination of the seat section.

11.1.4 Adjustment of the Trendelenburg / anti-Trendelenburg function

- ❖ For adjustment of the inclination of the lying surface press the corresponding button (**T 4**, s. fig. in chapter 11.1 HAND CONTROL WITH MEMORY FUNCTION).
- ❖ For the direction of movement, please note the arrow symbols and the number of dots above them on the hand control.
- The MLR SELECT can be inclined to the desired direction of movement up to an inclination angle of approx. 14°.
- If an insufficient height is reached during the adjustment of the inclination, the MLR SELECT moves up automatically to avoid collision with the base.
- During the crossover from Trendelenburg to Anti-Trendelenburg, the MLR SELECT stops for approx. one second when reaching the horizontal position. If you continue to press the corresponding button, the MLR SELECT will continue to move.

⚠ **WARNUNG!** Ensure that there are no persons, body parts of persons, animals or objects between the lying surface and the base. RISK OF COLLISION! RISK OF CRUSHING! RISK OF INJURY! RISK OF DAMAGE!

11.1.5 Memory functions of the hand control

- ❖ In addition to four pre-set treatment positions, the MLR Select hand control has two individual memory positions (memory positions: M 1 / M 2).
- ❖ The memory function saves the treatment positions you wish to use and simplifies your work processes. Use the buttons M 1 and M 2 (s. fig. in chapter 11.1 HAND CONTROL WITH MEMORY FUNCTION).
- * The memory positions are saved in the same way as the electrical settings of the MLR SELECT using the double-tap system.

SAVING THE MEMORY POSITIONS:

- 1. Set the desired position as usual with the buttons T 1 to T 4.
- 2. Press button M 1 or M 2 twice /(double-tap system) and keep it pressed for about 3 seconds.



3. An acoustic signal sounds when the setting has been successfully saved.



4. The respective memory position is now saved.

RECALLING THE MEMORY POSITIONS:

Press and hold the corresponding MEMORY button M 1 or M 2 pressed **until** the saved treatment position is reached.





11.1.6 Locking function of the hand control with memory function

- ❖ The MLR Select is equipped with a LOCKING FUNCTION of the hand control to protect the spa table from unauthorized use.
- ❖ By default, no automatic locking is set. You can decide for yourself whether to change this.
- The currently running heating cycle is **not affected** by an automatic locking. A manual lock also **does not affect** the currently running heating cycle and has **no effect on the operation of the heating system.**

VARIOUS AUTOMATIC LOCKING TIMES:

Various automatic locking times can be set.

To get feedback on the currently set automatic locking time, press buttons T 9 and T 10 once <u>simultaneously.</u>

Feedback on the currently set automatic locking time is given as follows via flashing of all LEDs of the hand control and several beeps, depending on the automatic locking time:

- automatic locking after 30 minutes:1 beep and 1 time flashing of all LEDs of the hand control
- automatic locking after 60 minutes:
 2 beeps and 2 times flashing of all LEDs of the hand control
- automatic locking after 90 minutes:
 3 beeps and 3 times flashing of all LEDs of the hand control
- automatic locking after 120 minutes:
 4 beeps and 4 times flashing of all LEDs of the hand control
- no automatic locking:
 5 beeps and 5 times flashing of all LEDs of the hand control

To change from one automatic locking time to the next, please press both buttons T 9 and T 10 simultaneously and keep them pressed for about 6 seconds. All LEDs flash and a corresponding beep is sounded to provide feedback on the currently set automatic locking time, followed by a change to the next automatic locking time.

Example:

30 minutes is set as the automatic locking time.

You want to change to the automatic locking time 60 minutes.

Press the corresponding buttons simultaneously and keep them pressed for approx. 6 seconds until feedback about the now set automatic locking time 60 minutes is given through flashing of all LEDs of the hand control and beeps.

The automatic locking time is always changed in this sequence:

30 min. - 60 min. - 90 min. - 120 min. - no automatic locking.



Buttons T 9 + T 10 (F3)

LOCKING THE DRIVES MANUALLY:

- 1. To lock the drives manually, press the LOCK button (**T 11** of the hand control) and **keep it pressed** for about 2 seconds.
- 2. Successful locking is confirmed by an acoustic signal and the LED above the button on the hand control also lights up.



3. The drives are now locked.


UNLOCKING THE DRIVES MANUALLY:

- 1. To unlock the drives, press the LOCK button (**T 11**) on the hand control **twice in quick succession** (double-tap) and keep it pressed for about 2 seconds.
- 2. The successful unlocking is confirmed by an acoustic signal and the LED above the button on the hand control is switched off.



3. The drives are now unlocked.

11.2 Hand control without memory function

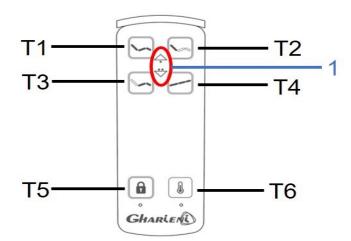

- ❖ You can control the two lifting columns and the actuators by pressing and holding down the corresponding push button.
- ❖ The hand control has 6 buttons.
- ❖ Adjustment of the working height, the backrest, the seat tilt, and the Trendelenburg / anti-Trendelenburg function (buttons T 1 T 4) is done by a double-tap system.

This is for safety reasons. A movement that is associated with danger is made <u>consciously</u> by this.

For the direction of movement, please note the arrow symbols and the number of dots in the upper area of the hand control.

By simply pressing a button and keeping it pressed, a movement is made upwards.

By pressing a button twice (double-tap system) and keeping it pressed, a movement is made in the opposite direction.

De-activation of the lock function also works with the double-tap system.

T 1	Button for adjustment of the WORKING HEIGHT		
T 2	Button for adjustment of the BACKREST		
Т 3	Button for adjustment of the INCLINATION (seat area)		
T 4	Button for adjustment of the TRENDELENBURG / ANTI-TRENDELENBURG FUNCTION		
Т 5	► The LOCK BUTTON locks and unlocks the hand control / the actuators.		
Т 6	 BUTTON FOR THE HEATING SYSTEM (optional) By using this button you can switch on the heating system, set it in 3 levels and switch it off again. 		

	SYMBOLS FOR THE DOUBLE-TAP SYSTEM
1	❖ The working height, backrest, inclination of the seat area and Trendelenburg / anti-Trendelenburg function (buttons T 1 - T 4) are adjusted using the double-tap system.
	❖ This serves for safety. A movement associated with danger is made <u>consciously</u> by this.

11.2.1 Adjustment of the working height

- ❖ For adjustment of the WORKING HEIGHT press the corresponding button (**T 1**, s. fig. in chapter 11.2 HAND CONTROL WITHOUT MEMORY FUNCTION).
- ❖ For the direction of movement, please note the arrow symbols and the number of dots above them on the hand control.
- ❖ Press the button once and hold it down to raise the MLR SELECT.

 Press the button twice and hold it down to lower the MLR SELECT.
- The horizontal WORKING HEIGHT of the MLR SELECT **STATIC, WOOD, VINTAGE, K8 and ELLIPSE** is adjustable from approx. 61 cm up to approx. 91 cm (if the adjustable feet are retracted).
- ❖ The horizontal WORKING HEIGHT of the MLR SELECT **ALU** is adjustable from approx. 63 cm up to approx. 93 cm (if the adjustable feet are retracted).
- ❖ The horizontal WORKING HEIGHT of the MLR SELECT **STATIC**, **WOOD**, **VINTAGE**, **K8** and **ELLIPSE** (**soft upholstery**) is adjustable from approx. 66 cm up to approx. 96 cm, due to the thicker upholstery (if the adjustable feet are retracted).
- The horizontal WORKING HEIGHT of the MLR SELECT **ALU** (**soft upholstery**) is adjustable from approx. 68 cm up to approx. 98 cm, due to the thicker upholstery (if the adjustable feet are retracted).
- * Extracting of the adjustable feet (up to 3 cm) will increase the WORKING HEIGHT a bit.
- The ENTRY HEIGHT is the lowest position of the seat / seat section.

 At this height, your customer has easy access to the MLR SELECT from the side.
- ➤ <u>MLR SELECT STATIC, WOOD, VINTAGE, K8, ELLIPSE</u> = approx. 61 cm / seat (seat section) in horizontal position
- ➤ MLR SELECT ALU = approx. 63 cm / seat (seat section) in horizontal position
- ➤ MLR SELECT STATIC, WOOD, VINTAGE, K8, ELLIPSE (soft upholstery) = approx. 66 cm / seat (seat section) in horizontal position
- ➤ MLR SELECT ALU (soft upholstery) = approx. 68 cm / seat (seat section) in horizontal position

11.2.2 Adjustment of the backrest

- ❖ The inclination of the backrest can also be adjusted using the hand control.
- ❖ For adjustment of the backrest press the corresponding button (**T 2**, s. fig. in chapter 11.2 HAND CONTROL WITHOUT MEMORY FUNCTION).
- ❖ For the direction of movement, please note the arrow symbols and the number of dots above them on the hand control.
- Press the button once and hold it down to raise the backrest of the MLR SELECT.

Press the button twice and hold it down to lower the backrest of the MLR SELECT.

⚠ WARNING! Ensure that no body parts or items are between the parts of the MLR SELECT while adjusting the treatment position. RISK OF CRUSHING!

11.2.3 Adjustment of the inclination of the seat section

- ❖ Via the electrically adjustable knee bend the inclination of the seat section (thigh section to knee bend section) can also be adjusted easily using the hand control.
- ❖ For the adjustment of the inclination of the seat section press the corresponding button (**T 3**, s. fig. in chapter 11.2 HAND CONTROL WITHOUT MEMORY FUNCTION).
- ❖ For the direction of movement, please note the arrow symbols and the number of dots above them on the hand control.
- ❖ Press the button once to move up or twice to move down and hold it down to adjust the inclination of the seat section.

11.2.4 Adjustment of the Trendelenburg / anti-Trendelenburg function

- ❖ For adjustment of the inclination of the lying surface press the corresponding button (**T 4**, s. fig. in chapter 11.2 HAND CONTROL WITHOUT MEMORY FUNCTION).
- ❖ For the direction of movement, please note the arrow symbols and the number of dots above them on the hand control.
- The MLR SELECT can be inclined to the desired direction of movement up to an inclination angle of approx. 14°.
- If an insufficient height is reached during the adjustment of the inclination, the MLR SELECT moves up automatically to avoid collision with the base.
- During the crossover from Trendelenburg to Anti-Trendelenburg, the MLR SELECT stops for approx. one second when reaching the horizontal position. If you continue to press the corresponding button, the MLR SELECT will continue to move.

⚠ **WARNUNG!** Ensure that there are no persons, body parts of persons, animals or objects between the lying surface and the base. RISK OF COLLISION! RISK OF CRUSHING! RISK OF INJURY! RISK OF DAMAGE!

11.2.5 Locking function / lock button of the hand control without memory function

❖ The MLR SELECT is equipped with a LOCKING function to protect against unauthorized use.

The actuators and drives lock **automatically** after 30 minutes of non-operation. The currently running heating cycle is **not affected** by this.

A manual lock also **does not affect** the currently running heating cycle and has **no effect on the operation of the heating system.**

ACTIVATING THE LOCKING FUNCTION:

- 1. To activate the locking function, press the LOCK button (**T 11** of the hand control) and **keep it pressed** for about 3 seconds.
- 2. Successful locking is confirmed by an acoustic signal and the LED above the button on the hand control also lights up.



3. The actuators are now locked.

DE-ACTIVATING THE LOCKING FUNCTION:

- 1. To unlock, press the LOCK button (**T 11**) on hand control **twice in quick succession** and keep it pressed for about 3 seconds.
- 2. The successful unlocking is again confirmed by an acoustic signal and the LED above the button on the hand control is switched off.



3. The actuators are now unlocked.

12. Foot control (optional equipment)


- ❖ The foot control (see illustrations) can be connected in addition to the hand control and enables the control of the basic functions, the storage and recall of individually stored memory positions M 1 and M 2, the recall of the permanently stored entry position as well as the operation of the locking function and the optional heating system.
- The foot control consists of a left and a right part and a middle part (see illustration).
- Pressing a single pedal causes only one function to be adjusted backwards or forwards (e.g. working height or backrest / see illustration).
- Saving and approaching the individually storable memory positions, approaching the permanently stored entry position, the activation/de-activation of the locking function and operation of the heating system is done in combination with **several** pedals of the foot control.
- As with the hand control, operation is in double-tap system.

 This is for safety reasons. A movement that is associated with danger is made consciously by this.
- For the direction of movement, please note the arrow symbols and the number of dots on the stickers of the left and right part of the foot control.

By <u>simply</u> pressing a pedal and holding it down, a movement upwards is made. Pressing a pedal <u>twice</u> (double-tap system) and holding it down makes a movement in the opposite direction.

The two individually adjustable memory positions are also stored manually using the double-tap system (s. chapter 11.1.5 MEMORY FUNCTIONS OF THE HAND CONTROL).

NOTICE! For safety reasons, the spa table only moves if you press one pedal or more of the optional foot control. When you release it, the movement stops immediately.

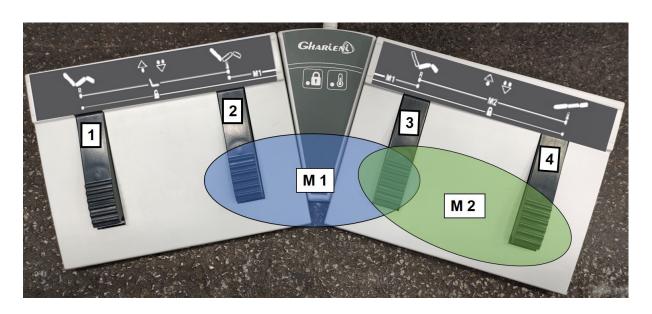

FOOT CONTROL (LEFT PART)

FOOT CONTROL (RIGHT PART)

	FOOT CONTROL (LEFT PART):
1	WORKING HEIGHT: UP / DOWN
2	BACKREST: UP / DOWN
FOOT CONTROL (RIGHT PART):	
	FOOT CONTROL (RIGHT PART):
3	FOOT CONTROL (RIGHT PART): INCLINATION (seat area): UP / DOWN

	LEFT PART AND RIGHT PART:			
	MEMORY POSITION M 1: ➤ Saving the memory position:			
M 1	Left part of the foot control, press pedal 2 and right part of the foot control, press pedal 3 simultaneously twice (double-tap system) and keep them pressed until an acoustic signal confirms the successful saving. Recalling the memory position: Press and keep the two pedals pressed until the saved treatment position is reached.			
M 2	 MEMORY-POSITION M 2: Saving the memory position: Right part of the foot control, press pedal 3 and right part of the foot control, press pedal 4 simultaneously twice (double-tap) and keep them pressed until an acoustic signal confirms the successful saving. Recalling the memory position: Press and keep both pedals pressed until the saved treatment position is reached. 			
Entry position P1	Left part of the foot control, press pedal 1 and left part of the foot control, press pedal 2 <u>simultaneously</u> and keep them pressed until the position is reached. THE ENTRY POSITION CANNOT BE CHANGED.			
Lock / unlock	 Left part of the foot control, press pedal 1 and right part of the foot control, press pedal 4 and keep them pressed until the bed is locked. For confirmation, an acoustic signal sounds and the LED (diode) in the middle part of the foot control lights up. To unlock the bed, press the two pedals on the foot control twice in quick succession (double-tap) and keep them pressed. An acoustic signal sounds again and the LED (diode) in the middle part of the foot control is switched off. 			
Heating system	 Left part of the foot control, press pedal 2 and right part of the foot control, press pedal 4 simultaneously. The seat heating level is indicated by means of an LED (diode) in the middle part of the foot control. Please refer to the table in chapter 13. HEATING SYSTEM (OPTIONAL EQUIPMENT). 			
Reset	 Left part of the foot control, press pedal 1 and right part of the foot control, press pedal 3 simultaneously and keep them pressed for approx. 10 seconds. See chapter 15. RESET. A reset procedure is only possible in the event of a system error. 			

NOTICE! For safety reasons, the bed only moves while you are pressing one pedal or more on the optional foot control. When you release it, the movement stops immediately.

To raise the bed, for example, you must press pedal 1 once and hold it down. To lower it, you must press the pedal <u>twice</u> and hold it down. The same applies for adjustment of the backrest, the inclination of the seat area and for adjustment of the Trendelenburg / anti-Trendelenburg function

(pedal 2, 3 and 4).

Storing the two individual memory positions M 1 or M 2 also works in the same way as using the hand control using double-tap: press the pedal <u>twice</u> and hold to store, press <u>once</u>, and hold to recall the position.

Locking/unlocking also works exactly as with the hand control using double-tap. When the operation of the bed is locked, the LED in the middle part of the foot control lights up.

Only the approach of the fixed position P 1 (entry position) is done by pressing the two pedals 1 and 2 <u>once</u> and holding down.

12.1 Foot control with Bluetooth (optional equipment)

- ❖ A foot control with Bluetooth can be connected as an option in addition to the hand control.
- ❖ The foot control enables the adjustment of the basic functions and the approach of the two fixed positions P1 to P4.

 In addition, the heating system can be operated, the bed can be locked and unlocked, and the bed software can be reset.
- On delivery, the foot control is already connected to the control of the bed. If the lounger cannot be adjusted via the Bluetooth foot control, you may have to change the batteries.
- The operation is done in the double-tap system, as with the hand control. This is for safety reasons. A movement that is associated with danger is made <u>consciously</u> by this.

By <u>simply</u> pressing a button and keeping it pressed, a movement is made upwards.

Pressing a button <u>twice</u> (double-tap system) and keeping it pressed makes a movement in the opposite direction.

Some functions are also set by double-tapping.

➤ When purchasing a MLR SELECT, the hand control is included as standard. Optionally, for an additional charge, the foot control with Bluetooth can be purchased.


NOTICE! The Bluetooth foot control is battery-operated.

With normal use (a few minutes daily), a battery life of 3-4 years can be expected. It is not necessary to pair the Bluetooth foot control with the couch control again when replacing the batteries.

NOTICE! If the Bluetooth foot control does not work despite changing the batteries, please contact our customer service.

NOTICE! The Bluetooth foot control may have to be woken up by pressing any button before use, as it switches to sleep mode after approx. three seconds.

NOTICE! To switch on the heating system with the first heating level, to change to the next heating level or to switch off the heating system, the buttons of the Bluetooth foot control must be held down for approx. one second.

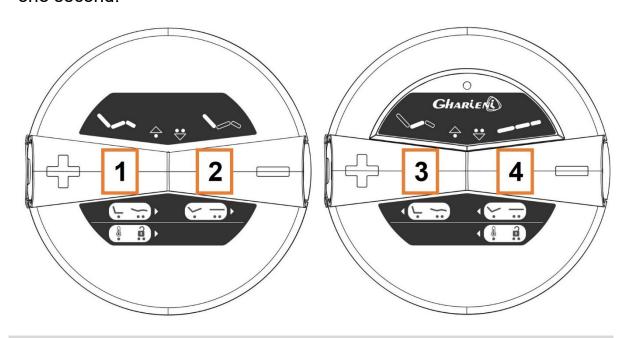

	LEFT PART OF THE FOOT CONTROL:
1	WORKING HEIGHT: UP/DOWN
2	BACKREST: UP/DOWN
	RIGHT PART OF THE FOOT CONTROL:
3	RIGHT PART OF THE FOOT CONTROL: INCLINATION OF THE SEAT AREA: UP/DOWN

LEFT AND RIGHT PART OF THE FOOT CONTROL:
 Press the left part of the foot control, button 1 and the right part of the foot control, button 3 simultaneously once (single tap) and keep them pressed until the position is reached. THE ENTRY POSITION CANNOT BE CHANGED.
Press the left part of the foot control, button 1 and the right part of the foot control, button 3 simultaneously twice (double tap) and keep them pressed until the position is reached. THE S-CURVED POSITION CANNOT BE CHANGED.
Press the left part of the foot control, button 2 and the right part of the foot control, button 4 simultaneously once (single tap) and keep them pressed until the position is reached. The Pedicure Position Cannot be Changed.
Press the left part of the foot control, button 2 and the right part of the foot control, button 4 <u>simultaneously</u> twice (double tap) and keep them pressed until the position is reached. THE MASSAGE POSITION CANNOT BE CHANGED.
To unlock the bed, press both buttons 1 (left part of the foot control) and 4 (right part of the foot control) twice in quick succession (double tap) and keep them pressed. An acoustic signal sounds. Whether the bed is locked, can be seen from the LED above the button of the hand control.
 Press the left part of the foot control, button 1 and the right part of the foot control, button 4 simultaneously once and hold them for approx. one second (single tap) to change from one heating level to the next heating level or to switch off the heating system. The adjusted heating level is indicated using an LED (diode) above the button of the hand control.

13. Heating system (optional equipment)

- ❖ The heating system is a pre-programmed and fully automatic heating system which allows a comfortable operation.
 - The heating system is integrated into the upholstery of the MLR SELECT and works with modern microprocessor technology.
 - The heating system is optionally available for an additional charge.
- Due to the pre-programmed microchip, you **only** must switch on the heating system to start the heating system with the lowest heat/power level. The heating cycle is fully automatic and switches off automatically after the total time (90 minutes) has elapsed.
 - ➤ s. chapter 13.1 OPERATION.
- ❖ Various automatic locking times can be set, s. chapter 11.1.6 LOCKING FUNCTION OF THE HAND CONTROL WITH MEMORY FUNCTION. The heating cycle currently running is **not affected** by this.
- Even a manual locking does not affect the currently running heating cycle and has no effect on the operation of the heating system.
 - ➤ s. chapter 11.1.6 LOCKING FUNCTION OF THE HAND CONTROL WITH MEMORY FUNCTION and chapter 11.2.5 LOCKING FUNCTION / LOCK BUTTON OF THE HAND CONTROL WITHOUT MEMORY FUNCTION.
 - > see chapter 12. FOOT CONTROL and chapter 12.1 FOOT CONTROL WITH BLUETOOTH.

NOTICE! The currently active heating level is displayed with an LED (diode) above the button of the hand control or in the middle part of the optional foot control with cable. The frequency of the pulse for visualisation varies according to the active heating level.

⚠ WARNING!

- 1. **Do not use** the option heating system if your customer
 - has got a pacemaker.
 - > is pregnant.
 - > is affected by thrombosis.
 - suffers from pain due to unknown reasons.
- 2. Apply to healthy people only.
- 3. If treatment is stopped prematurely, the heating system must be switched off by pressing the corresponding button on the hand control or the optional foot control to avoid heat build-up.
- 4. Disconnect the MLR SELECT from the mains if it is not used for a longer time, e.g. during the night.

⚠ **WARNING!** People with acute pain, venous disorders, low blood pressure, inflammatory processes and other medical conditions that make heat applications or this form of client positioning questionable must always consult a doctor before use.

⚠ **WARNING!** Never use the MLR SELECT on people who are under the influence of alcohol or drugs.

⚠ WARNING! The cables of the models incl. the heating system are between the upholstery and the underframe (depending on model). The upholstery may only be removed by persons authorized by Gharieni Group GmbH!

13.1 Operation

- ❖ The heating system is operated using the button **T 12** of the hand control with memory function resp. button **T 6** of the hand control without memory function.
- For operation of the heating system using the optional foot control or the foot control with Bluetooth, see chapter 12. FOOT CONTROL (OPTIONAL EQUIPMENT) and chapter 12.1 FOOT CONTROL WITH BLUETOOTH.



POWER ON:

. Use this button to switch **on** the heating system.

The heating system comes with three heat / power levels.

To quickly heat up the bed's surface before starting treatment, we recommend setting the heating system to level 2; only in exceptional cases to level 3 (highest level).

- Please refer to the following charts to find information on how to operate the heating system.
- After a total time of **90 minutes** the heating system switches off automatically; regardless of the set heating level.
- * This process is pre-programmed.



POWER OFF:

Using this button you also switch off the heating system.

There are three heat / power levels to choose from:

		Heating level	Visualization via LED (diode)	Heating output
button	Push button once	Power on / level 1	single impulse for 0.3 seconds, interval 1 second	30 %
button •	Push this button again	level 2	double impulse, lights up for 0.3 seconds, interval 1 second	60 %
button 🕼	Push this button again	level 3	triple impulse, lights up for 0.3 seconds, interval 1 second	90 %
button &	Push this button again	Power off		

NOTICE! If the heating system is not present on your bed, this will be indicated by the LED above the button flashing rapidly when you press the button for operating the heating system.

For operation with the optional foot control and with the optional foot control with Bluetooth, you also have a choice of three heat / power levels:

		Heating level	Visualization via LED (diode)	Heating output
Pedals / buttons 2 +4	Push pedals / buttons once	Power on / level 1	single impulse for 0.3 seconds, interval 1 second	30 %
Pedals / buttons 2 +4	Push these pedals / buttons again	level 2	double impulse, lights up for 0.3 seconds, interval 1 second	60 %
Pedals / buttons 2 +4	Push these pedals / buttons again	level 3	triple impulse, lights up for 0.3 seconds, interval 1 second	90 %
Pedals / buttons 2 +4	Push these pedals / buttons again	Power off		

NOTICE! For operation of the heating system using the foot control or the Bluetooth foot control, s. chapter 12 and 12.1.

NOTICE! If the heating system is not present on your bed, this will be indicated by the rapid flashing of the LED in the middle part of the optional foot control with cable when you press the pedals to operate the heating system.

NOTICE! The Bluetooth foot control may have to be woken up by pressing any button before use, as it switches to sleep mode after approx. three seconds.

NOTICE! To switch on the heating system with the first heating level, to change to the next heating level or to switch off the heating system, the buttons of the Bluetooth foot control must be held down for approx. one second.

14. Vibro Wellness 10 (optional equipment)

❖ The VIBRO WELLNESS 10 FUNCTION for the MLR SELECT is optionally available for an additional charge. VIBRO WELLNESS 10 is a pleasantly massaging vibration system and includes many various adjustment options.

⚠ WARNING!

- 1. Do not use the option Vibro Wellness 10 if your customer
 - has got a pacemaker.
 - > is pregnant.
 - > is affected by thrombosis.
 - suffers from pain due to unknown reasons.
- 2. Apply to healthy people **only.**

WARNING! Do not open the housing of the hand control! Non-compliance will expire the warranty.

⚠ WARNING! Liquids must not get into the hand control. RISK OF FLECTRIC SHOCK!


⚠ WARNING! Persons with a pacemaker must not operate or use the massage unit as the pacemaker can be negatively influenced!

⚠ **WARNING!** The cables of the models incl. the Vibro Wellness 10 function are between the upholstery and the underframe.

The upholstery may only be removed by persons authorized by Gharieni Group GmbH!

14.1 Hand control

- ❖ The 10 motors of the VIBRO WELLNESS 10 function are installed in different sections of the lying surface (s. fig. 8 / below).
- ❖ Use the associated hand control (s. fig. 9 / below) to activate the individual sections in pairs.

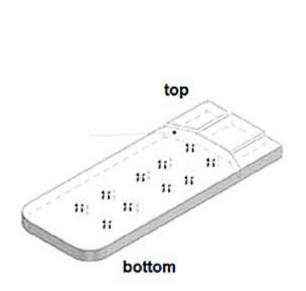

(fig. similar / fig. serves as an example only)

FIG. 8

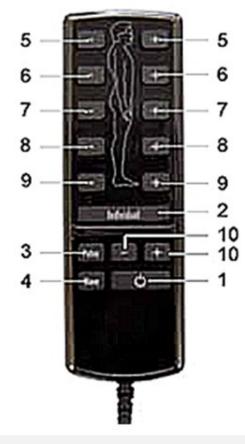


Fig. 9

1	ON / OFF BUTTON
2	INDIVIDUAL BUTTON
3	Pulse-massage button (Pulse button)
4	Wellness-massage button (Wave button)
5	INTENSITY BUTTONS: SHOULDER AREA / BACK AREA
6	INTENSITY BUTTONS: FUSELAGE AREA / BACK AREA
7	INTENSITY BUTTONS: PELVIC AREA / BACK AREA

8		INTENSITY BUTTONS: LEG AREA	
9)	INTENSITY BUTTONS: CALF AREA / FOOT AREA	
10		Button to change the SPEED of the PULSE-MASSAGE PROGRAMME and WELLNESS-MASSAGE PROGRAMME (three levels).	

14.2 Operation

HOW TO START A MASSAGE:

You can start a massage by pressing the FOLLOWING BUTTONS:

ON / OFF BUTTON (1)

- ❖ When the massage unit is operated for the first time, the setting INDIVIDUAL is activated.
- ❖ All massage motors operate in the manufacturer's setting (intensity level 2 / medium intensity).
- ❖ When the massage unit has been operated before, the previously-set programme is started again (INDIVIDUAL, PULSE OR WELLNESS MASSAGE).

INDIVIDUAL BUTTON (2)

- ❖ When the massage unit is operated for the first time, the manufacturer's setting is activated (intensity level 2 / medium intensity).
- ❖ When an individual setting has been set before (s. below: INDIVIDUAL SETTING), the previously-set setting is started again.

Pulse-massage button (3)

Start this massage with the first of the three pulse-massage programmes.

WELLNESS-MASSAGE BUTTON (4)

❖ Start this massage with the **first** of the three wellness-massage programmes.

INTENSITY BUTTONS (5-9)

- ❖ Pressing one of these buttons sets the relevant massage motor to intensity level 1.
- Please note: Doing so will overwrite a previously-set individual setting (s. below: INDIVIDUAL SETTING)!

INDIVIDUAL SETTING (2):

- > Start the massage by pressing the INDIVIDUAL BUTTON (2).
- ➤ When the massage unit is operated for the first time, the manufacturer's setting is activated (intensity level 2 / medium intensity).
- Now you can set each motor to **three levels** of intensity using the INTENSITY BUTTONS (5) (9).
- The levels are indicated on the LED-display as follows.

		Level 0 (OFF)	
■ [Level 1	
		Level 2	
-		Level 3	
	LED O ff		LED O N

- When the lowest intensity (level 1) has been reached, press one of the INTENSITY BUTTONS (5) (9) again to switch off the relevant motor.
- ➤ When you switch off all massage motors, the massage is stopped.
- ➤ You can change from the manufacturer's setting (intensity level 2 / medium intensity) to your individual setting by pressing the INDIVIDUAL BUTTON (2).
- The individual settings are saved after the massage.

Pulse-massage (3):

- ➤ Press the PULSE-MASSAGE BUTTON (3) to start the massage with the **first** of the three programmes.
- ➤ Press the PULSE-MASSAGE BUTTON (3) a second time to start the **second** programme.
- Press the PULSE-MASSAGE BUTTON (3) a third time to start the **third** programme.
- ➤ When you press the PULSE-MASSAGE BUTTON (3) a <u>fourth</u> time, the **first** programme will be started again.
- You can select three levels of speed with the + and BUTTONS (10).

- You can select **three levels** of intensity with the INTENSITY BUTTONS (5) -(9).
- **Please note:** The PULSE-MASSAGE will be restarted in the manufacturer's setting.

WELLNESS-MASSAGE (4):

- ➤ Press the WELLNESS-MASSAGE / WAVE BUTTON (4) to start the massage with the **first** of the three programmes.
- ➤ Press the WAVE BUTTON (4) a second time to start the **second** programme.
- Press the WAVE BUTTON (4) a third time to start the **third** programme.
- ➤ When you press the WAVE BUTTON (4) a <u>fourth</u> time, the **first** programme will be started again.
- You can select three levels of speed with the + and BUTTONS (10).
- You can select three levels of intensity with the INTENSITY BUTTONS (5) (9).
- **Please note:** The WELLNESS-MASSAGE will be restarted in the manufacturer's setting.

HOW TO FINISH A MASSAGE:

- ❖ A timer finishes a massage after 15 minutes automatically.
- ❖ If you want to stop the massage before, press the ON / OFF BUTTON (1).



We remind you that the vibration motor of the 10 VIBRO WELLNESS FUNCTION becomes correspondingly louder at the highest setting.

This is no reason for concern or complaint.

15. Reset


If a previously saved position is no longer properly set, you may have to reset the software of the MLR SELECT. To correct the differences of position, you must carry out the following steps.

NOTICE! A reset process is only possible in the event of a system error.

PLEASE PROCEED AS FOLLOWS:

Reset 1 (actuators):


Press the **lower** two buttons of the respective hand control (s. fig. below) **simultaneously and hold them down for approx. 10 seconds** until the signal tone ends.



- 1. The backrest actuator must be completely retracted (button **T** 2 of the hand control with memory function, resp. without memory function).
- The actuator for the inclination of the seat area must be level with the leg section (calf area), i.e. set horizontally.
 ATTENTION! Please keep button T 3 of the respective hand control pressed until the actuator switches off!

Reset 2 (lifting columns):

Press the **upper** two buttons of the respective hand control (s. fig. below) <u>simultaneously</u> and hold them down for approx. 10 seconds until the continuous tone changes to an interval tone.



The two lifting columns must be moved to the <u>lowest</u> position (**button T 1** of the hand control with memory function, resp. without memory function). To do this, alternately use buttons T 1 and T 2 to lower both lifting columns steps by step until they have reached their lowest position.

- * The reset process is complete when the described positions are reached.
- This process must be carried out manually, i.e. each drive must be run individually.

Please note that you keep the buttons pressed for 2-3 seconds longer after reaching the end position.

⚠ WARNING! The adjustment (initialization) must be carried out manually, i.e. each drive must be run individually. Do not use any of the memory buttons for this!

⚠ **WARNING!** Ensure that there are no persons, body parts of persons, animals or objects between the lying surface and the base.

RISK OF COLLISION! RISK OF CRUSHING! RISK OF INJURY!

RISK OF DAMAGE!

16. Cleaning and maintenance of the MLR SELECT

⚠ WARNING Always disconnect the MLR SELECT from the mains (unplug) before cleaning and maintenance. RISK OF ELECTRIC SHOCK! RISK OF FIRE!

⚠ **WARNING!** Regularly remove any dust build-up from the mains plug, the safety socket, and all electrical plug connections, e.g. with a commercially available vacuum cleaner. RISK OF FIRE!

⚠ WARNING! Always ensure that water or other liquids cannot get into the housing and the fittings of the MLR SELECT or into the hand controls or foot controls. RISK OF ELECTRIC SHOCK! RISK OF FIRE!

NOTICE! Damage to the Spa Table, the upholstery and / or of the material of the base caused using unsuitable cleaning agents **is not covered by the guarantee or warranty!**

- ❖ **Do not wear** any arm and finger decoration such as rings or bracelets while carrying out any cleaning or maintenance operations. Otherwise you can scratch and damage the upholstery and / or the material of the base of the MLR SELECT unintentionally.
- **.** Use water or a mild cleaning agent which is suitable for the material **only**.
- **Do not use** extremely hot water for the cleaning of the MLR SELECT.
- **Do not use** any hard sponges, scouring pads or floor clothes.
- ❖ Do not use any aggressive cleaning agents such as scouring powders, floor cleaners, etc.
- **Do not use** any dishwashing detergents.
- ❖ **Do not use** any solvents or bleaching agents.
- **Do not use** any essential oils.

16.1 Cleaning of the upholstery

The upholstery of the MLR SELECT is made of **polyurethane** (**PU**), artificial leather or Ferrari Stamskin Top artificial leather.

16.1.1 Cleaning and care of the polyurethane material (PU)

Clean the PU using a soft cloth **only** provided with a small amount of a suitable cleaning agent (also available from Gharieni: see chapter 19. UPHOLSTERY CARE AND CLEANING AGENTS).

16.1.2 Cleaning and care of the artificial leather

Clean the artificial leather **only** with a soft cloth with a small amount <u>of a detergent suitable for this material</u> (also available from Gharieni: see chapter 19. UPHOLSTERY CARE AND CLEANING AGENTS).

NOTICE! The upholstery of the MLR SELECT can also be made of artificial leather or Ferrari Stamskin Top artificial leather. This material can be cleaned with a cloth with some detergent, which must be suitable for artificial leather.

16.2 Cleaning the housing and the fittings

Clean the housing and the fittings using a soft damp cloth or a soft sponge and a small amount of soap only.

⚠ WARNING! Always ensure that water or other liquids cannot get into the housing and the fittings of the MLR SELECT or into the hand controls or into the optional foot controls. RISK OF ELECTRIC SHOCK! RISK OF FIRE!

16.3 Cover of the upholstery

- ❖ The upholstery of the MLR SELECT is equipped with a surface made of polyurethane (PU).
- To protect these material (polyurethane) as well as the actual upholstery, we recommend the use of suitable PROTECTIVE COVERS.

PROTECTIVE COVERS AVAILABLE AT GHARIENI GROUP GMBH	
Standard cosmetic applications (e.g. facials, etc.):	 5-piece terry cover. The 5-piece terry covers are available with or without oil-repellent PU coating.
Massages including a small amount of oil:	 These treatments require a protective cover made of PU; as the second outer skin of the MLR SELECT, so to speak. It protects the upholstery from stains of oil and seeping in of oil.

Detailed explanations of the protective covers: see also chapter 18.5 PROTECTIVE COVERS

17. Malfunctions (possible causes and troubleshooting)

MALFUNCTION		
Possible cause(s)	TROUBLESHOOTING	
ALL MOTORS DO NOT WORK.		
1. No connection to the mains.	1. Check the connection status.	
2. The power supply cable is damaged.	2. Power supply cable must be replaced (please contact the customer service).	
3. Hand control / actuator plug are not plugged in properly.	3. Check proper connection of Hand control / plug.	
4. Hand control is defective.	4. Hand control must be replaced (please contact the customer service).	
5. Control box total loss.	5. Control box must be replaced (please contact the customer service).	
SINGLE MOTOR	DOES NOT WORK.	
1. Actuator plug is not connected properly.	1. Connect plug properly.	
2. Hand control is defective.	2. Hand control must be replaced (please contact the customer service).	
3. Control box is defective.	3. Control box must be replaced (please	
4. Actuator plug or plug is defective.	contact the customer service).4. Cord / plug must be replaced (please contact the customer service).	
5. Actuator is defective.	5. Actuator must be replaced (please contact the customer service).	

If the Spa Table shows a malfunction not noted on the schedule above or if you have checked all items on the above schedule but the problem still exists, please contact the customer service (s. also chapter 17.1 REPAIR).

17.1 Repair

YOU CAN CONTACT THE GHARIENI CUSTOMER SERVICE USING THE FOLLOWING CONTACT INFORMATION:		
CUSTOMER SERVICE HOTLINE:	+49 (0)2841/88300-40	
E-MAIL:	service@gharieni.com	

- 1. Always provide the **serial number** when contacting Gharieni customer service.
- 2. Repairs and modifications must be carried out by Gharieni Group GmbH or a person authorized by Gharieni Group GmbH.
- 3. The electrical installation of the room the MLR SELECT is installed in must meet the current legal regulations at the site where the MLR SELECT is operated.
- 4. The MLR SELECT is operated as described in the instruction manual.
- 5. In case of improper modifications or manipulations to the MLR SELECT, any warranty on behalf of Gharieni Group GmbH is excluded.
- 6. The spa table can remain connected to the mains and does not need to be disconnected from the mains for daily use.
- 7. Check the power cord regularly for signs of damage.
- 8. If the mains cable is damaged, it may only be replaced by Gharieni Group GmbH, or a customer service authorized by Gharieni Group GmbH or a qualified specialist (electrical engineer).

△ DANGER! In case of defects or malfunctions of the spa table, contact customer service **immediately**. Use of the spa table **must** be discontinued until the problem has been solved to avoid further damage to property and persons.

your Spa Table, we recommend taking a photo of the rating plate previously (e.g. using a mobile phone or a digital camera). This makes it easier for you to identify the information of the rating plate (e.g. the serial number of the Spa Table) to provide the required information to the customer service.

On the cover page of this instruction manual is an area where you can note the serial number of your Spa Table; this way you have the serial number always at hand.

If you wish to contact the Gharieni customer service regarding

18. Optionally available accessories

★ For detailed information regarding the optionally available accessories (s. below) please contact our sales department. Our team is happy to help!


18.1 Headrests

18.1.1 Dual headrest



This newly designed headrest offers full flexibility for every requirement. This headrest has a round or a horn-shaped face cushion.

The scope of delivery of the dual headrest includes an air cushion including a hand pump, which allows individual adjustment of the height of the respective face cushion; s. figs. below.

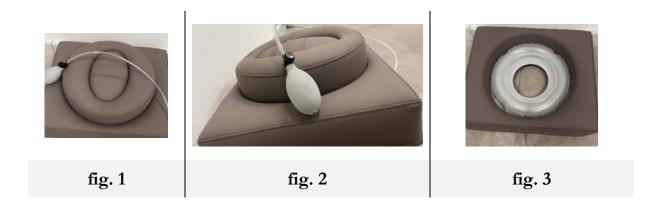

18.2 Gel cushions for nose slots

- ❖ GEL CUSHIONS for the headrest of the MLR SELECT are optional available for an additional charge.
- ❖ The GEL CUSHIONS are available in different variants.
- ❖ The GEL CUSHIONS are perfectly suited for prone positions (massage positions).
- ❖ Using a GEL CUSHION on the headrest upholstery (s. fig. below) can additionally support the face of the person to be treated.
- ❖ Using a GEL CUSHION can also prevent your customers from getting uncomfortable pressure marks on the face.
- ❖ Additionally, the face is cooled pleasantly due to the soft gel fluid.
 - > see also. chapter 10.6 HEADREST



GEL CUSHIONS FOR NOSE SLOTS

ARTICLE NUMBER: 45010

★ For detailed information regarding the **right size** and suitable version for your Spa Table please contact our sales department. Our team is happy to help!

18.3 Towels for nose slots (disposable cloths)

- ❖ DISPOSABLE CLOTHS (s. fig. below) for the nose slot of the headrest of the MLR SELECT are optional available for an additional charge.
- The DISPOSABLE CLOTHS are handy, hygienic, extra soft, and protect the upholstery of the headrest of your Spa Table.
- ❖ We recommend the DISPOSABLE CLOTHS for **all** headrests which are equipped with a nose slot.
- The DISPOSABLE CLOTHS are available in different sizes; up to overlengths which can cover the entire width of the Spa Table incl. armrests.



★ For detailed information regarding the **right size** and suitable version for the headrest of your Spa Table please contact our sales department. Our team is happy to help!

18.4 Neckrest "Dentalax"

- ❖ For the MLR SELECT, our popular NECKREST "DENTALAX" (s. fig below) is optional available for an additional charge.
- ❖ During treatment, this neckrest supports the cervical spine effectively.
- ❖ The NECKREST "DENTALAX" is available in white or in colour.
- * The lying comfort will be increased significantly when using the NECKREST "DENTALAX": "SMALL PART, GREAT EFFECT!"



Fig similar: colour and workmanship may vary depending on the model selected.

★ For detailed information regarding the right size and suitable version for the headrest of your Spa Table please contact our sales department. Our team is happy to help!

18.5 Protective covers

18.5.1 Protective covers made of terry

- ❖ PROTECTIVE COVERS MADE OF TERRY for our Spa Tables are optional available for an additional charge (s. fig. below).
- The PROTECTIVE COVERS MADE OF TERRY are available as a 5-piece set; with or without oil-repellent coating made of polyurethane (PU).
- ❖ The PROTECTIVE COVERS MADE OF TERRY are suitable for standard cosmetic applications.
- Our PROTECTIVE COVERS, which are specially-manufactured for our Spa Tables, will perfectly protect your working equipment from dirt and heavy use.
- ❖ Machine laundry (max. 60 °C) for hygienic cleaning is possible due to the high-quality material.
- ❖ Internal elastic bands keep the single sections exactly in the right position. All functions of the Spa Tables will continue working.
- Our COVERS are available in three different colours: white / choco and crème.
- ❖ You can order the relevant cover when purchasing the Spa Table.



Fig. similar: fig. serves as an example only.

★ For detailed information regarding the right size and suitable version of the covers as well as the compatibility with your Spa Table please contact our sales department. Our team is happy to help!

18.5.2 Protective covers made of polyurethane (PU)

- PROTECTIVE COVERS MADE OF POLYURETHANE (PU) for our Spa Tables (s. fig. below) are optional available for an additional charge.
- ❖ A PROTECTIVE COVER MADE OF PU serves as a second outer skin for the Spa Table, so to speak.
- ❖ PROTECTIVE COVERS MADE OF PU are suitable for massages including a small amount of oil.
- ❖ The COVERS protect the upholstery of your Spa Table from stains of oil and seeping in of oil.
- Additionally, the covers are resilient, water- and oil-repellent, and washable up to 90 °C.



Fig. similar: fig. serves as an example only.

★ For detailed information regarding the right size and suitable version of the covers as well as the compatibility with your Spa Table please contact our sales department. Our team is happy to help!

18.5.3 Protective foot cover

- ❖ A PROTECTIVE FOOT COVER (s. fig. below) for your Spa Table is optional available for an additional charge.
- ❖ The PROTECTIVE FOOT COVER is made of stable, transparent plastic and is fixed with a hook and loop fastener [consisting of a Velcro and a fleece strip (Counter Velcro)].
- The COVER protects the foot section of your Spa Table from dirt and soiling (e.g. by shoes).



PROTECTIVE FOOT COVER

ARTICLE NUMBER: 49052

NOTICE! We recommend ordering the protective foot cover directly when purchasing your Spa Table. In this case the fleece strip (Counter-Velcro / part of the hook and loop fastener) is already fixed on the Spa Table at delivery so that you can fasten the protective foot cover easily and comfortably. If you order the protective foot cover at a later point of time, you must fix the fleece strip (Counter-Velcro) of the hook and loop fastener on the Spa Table on your own responsibility.

If you would like to order a protective foot cover for your Spa Table at a later point of time, please indicate during the ordering process that the **fleece strip** (Counter-Velcro) should be supplied.

18.6 Holder for (magnifying) lamps

An extendable holder for (magnifying) lamps made of stainless steel is available as an option for the MLR SELECT; for an additional charge.

Designed to fit the LED magnifying lamp "Circle", it simply disappears under the bed when not in use.

18.7 LED magnifying lamp Circle

❖ The LED magnifying lamp "Circle" is available as an option for the MLR SELECT; for an additional charge.



NOTICE! Please see our separate assembly and instruction manual.

18.8 Aroma therapy / fragrance generator

NOTICE! Operation of the fragrance generator is only possible with the optional hand control **with** memory function.

Wellness with all senses: Enchant your customers with soothing fragrances. With the integrated fragrance generator, your treatment becomes a scentful experience.



Press buttons **P3** and **P4** (F 2) on the hand control simultaneously to switch the fragrance generator on or off, see illustration below.



If the fragrance generator is switched on, the diodes above the buttons on the hand control light up, and the diode on the fragrance generator also lights up.

The fragrance generator is located on the underside of the lying surface, in the chest area, see illustration below.

Especially during treatments in the prone position, through the nose slot, the respective fragrance can be perceived excellently.



Matching the fragrance generator:

PERFUME PEARLS, STARTER-SET:	777 AND SPER 26000
6 TVDES Á 15 ML IN A DLASTIC BAG	ITEM NUMBER: 36008

The fragrances are also available individually, in the 150 g tin.

NOTICE! During adjustment of the bed, the fragrance generator is switched off for a short time. After the bed has been adjusted, it is switched on again.

19. Upholstery care and cleaning agents

19.1 mikrozid [®] **sensitive** (alcohol-free)

- ❖ We recommend mikrozid[®] sensitive for gentle and thorough disinfection, care, and cleaning of the upholstery.
- * mikrozid[®] sensitive removes bacteria, fungi, and viruses (e.g. HBV, Rota, Vaccinia etc.).
- ❖ mikrozid[®] sensitive is available as liquid.
- Suitable for cleaning of PU and artificial leather upholstery.
- **❖** Without alcohol!
- Please follow the manufacturer's application instructions on the bottle.



MIKROZID® SENSITIVE: LIQUID

ITEM NUMBER: 79417

Microbiological efficacy

Efficacy	Concentration	Contact time
bactericidal EN13727 - dirty conditions	ready-to-use	1 min.
bactericidal in accordance with VAH Guidelines with short contact times	ready-to-use	1 min.
bactericidal EN16615 - dirty conditions	ready-to-use	1 min.

Efficacy	Concentration	Contact time
yeasticidal EN16615 - clean conditions	ready-to-use	1 min.
yeasticidal EN13624 - dirty conditions	ready-to-use	1 min.
virucidal against enveloped viruses in accordance with DVV (German Registered Association for Combating Viral Diseases)//RKI Guideline	ready-to-use	1 min.
Norovirus EN14476	ready-to-use	15 min.
Polyoma SV40 in accordance with DVV (German Registered Association for Combating Viral Diseases)//RKI Guideline	ready-to-use	1 min.
Rotavirus	ready-to-use	1 min.

Certificates

- VAH certificate
- IHO listed





For more information, visit the manufacturer's website at the following link: https://www.schuelke.com/intl-en/products/mikrozid-sensitive-liquid.php

19.2 Skai cleaner

- ❖ For gentle and thorough care and cleaning of the artificial leather upholstery we additionally recommend Skai cleaner.
- ❖ Skai cleaner is available in a 200 ml spray bottle.
- **\$** Especially suitable for cleaning artificial leather.



SKAI CLEANER

ITEM NUMBER: 79427

20. Conditions of transport, storage, and operation

20.1 Transport

- ❖ During transport, lift the MLR SELECT using the **carrying aids only** (s. chapter 6.2.1 USE OF THE CARRYING AIDS).
- ❖ Never carry the MLR SELECT by its lying / sitting surface or its armrests during transport; otherwise you can damage the MLR SELECT seriously.
- ❖ Always consider the total weight of the MLR SELECT; you will need the help of several persons.
- * Always consider the dimensions of the MLR SELECT. Narrow hallways, doors or staircases can make the transport difficult or impossible.

20.2 Ambient conditions for storage and transport

Temperature	from -10 °C to +50 °C ambient temperature
ATMOSPHERIC PRESSURE	from 700 to 1060 hPa
RELATIVE HUMIDITY	from 20% to 90% at +30 °C non-condensing

20.3 Ambient conditions for operation

Temperature	from +5 °C to +40 °C ambient temperature
ATMOSPHERIC PRESSURE	from 700 to 1060 hPa
RELATIVE HUMIDITY	from 30% to 75% at +30 °C non-condensing

21. Technical Data

MLR SELECT / GENERAL T	TECHNICAL DATA
Total length	200 cm
Total width Small	76 cm
Total width MediumSmall	80 cm
Total width Medium	85 cm
Total width Large	92 cm
Weight	approx. 120 kg - 150 kg
	(depending on the design of the
	base)
Adjustable height MLR SELECT	
Static, Wood, Vintage, K8, Ellipse	approx. 61 cm - 91 cm
Adjustable height MLR SELECT Alu	approx. 63 cm - 93 cm
Adjustable height MLR SELECT	
Static, Wood, Vintage, K8, Ellipse	
(soft upholstery)	approx. 66 cm - 96 cm
Adjustable height MLR SELECT Alu	
(soft upholstery)	approx. 68 cm - 98 cm
Inclination of the headrest	approx. +35 °/ - 48 °
Inclination of the backrest	approx. 0 ° - 70 °
Inclination of the Trendelenburg / anti-	
Trendelenburg function	approx. 14°
Lifting capacity	300 kg
max. load capacity of the lying surface	350 kg
max. load capacity of the armrests	25 kg

^{*} Technical modifications reserved.

<u>DRIVES INC</u>	CL. CONTROLS
Power supply	100 - $240~\mathrm{V} \sim$, 50 - $60~\mathrm{Hz}$
Power consumption	Output: approx. 350 W
	Standby power: approx. 0,5 W
Output voltage	24 V DC
Duty cycle (actuator)	10 % max. 2 min. continuous
	operation /
	18 min. break
Device protection class	I
Protection class against electric shock	type B
Protection class against penetration of	
substances	IP X6

* Technical modifications reserved

HEATING SYSTEM / GENERAL TECHNICAL DATA

Power supply	100 - 240 V \sim , 50 - 60 Hz
Power consumption	Output: approx. 120 W

* Technical modifications reserved.

VIBRO WELLNESS 10 / G	ENERAL TECHNICAL DATA
Power of transformer (primary)	$230~\mathrm{V}~\mathrm{AC}$ / $50~\mathrm{Hz}$ / $120~\mathrm{mA}$ max.
Power of transformer (secondary)	13.5 V AC / 1 A / 13.5 VA
Protection (primary)	1.6 AT (slow acting)

* Technical modifications reserved.

22. Disposal

- 1. While unpacking, the packaging materials should be kept away from children, pets, and persons with reduced mental capabilities. CHOKING HAZARD! RISK OF INJURY!
- 2. Do not dispose of the MLR SELECT together with your domestic waste. Old and unused Spa Tables must be sent for disposal to the responsible recycling centre for electric appliances. Do not remove the relevant symbol from the product.
- 3. **Never** expose to open flames.
- 4. The Spa Table should be cleaned thoroughly before disposal to protect persons, environment, and materials.
- 5. Before you dispose of a Spa Table or any old appliance, **render it inoperative**. Unplug the Spa Table / appliance and cut off the entire power cord. Dispose of the power cord and the plug immediately.
- 6. The MLR SELECT is made of metal and plastic components, electronic components, electric cables. Dispose of the separate components in accordance with the current local disposal regulations.
- 7. Dispose of any paper and cardboard into the corresponding containers.
- 8. Dispose of any plastics into the corresponding containers
- 9. If suitable containers are not available at your residential area, dispose of these materials at a suitable municipal collection point for waste-recycling.
- 10. Receive more detailed information from your retailer, municipal facilities or:

Gharieni Group GmbH

➤ Phone:	+49 (0)2841/88300-0
Fax:	+49 (0)2841/88300-999
Customer service hotline:	+49 (0)2841/88300-40
E-mail:	service@gharieni.com



Materials marked with this symbol are recyclable.



Please contact your local authorities to receive further information.

23. Warranty

The following warranty conditions apply to <u>new goods</u> worldwide:

Gharieni Group GmbH grants on all spa tables of the MLR SELECT series:

- \rightarrow 10 years warranty on metal frames
- → 5 years warranty on actuators and
- \rightarrow 3 years warranty on other components.

23.1 Exclusions from warranty

On delivery, it must be checked that there is no transport damage and that the accessories are complete and in proper condition. Resulting warranty claims must be registered within 8 days after delivery of the Gharieni product.

Excluded from warranty are wearing parts (such as all kinds of lamps as well as glass panels, consumables such as terry towels etc.).

Furthermore no warranty claims will be granted if:

- → the spa table and its associated components have been damaged due to improper use.
- → damage to the spa table and its associated components has been caused by gross negligence.
- \rightarrow the malfunction occurs through the fault of the operator.
- → stickers (such as rating plate, warning notices etc.) have been removed.
- → associated equipment or parts of the spa table or the associated equipment are opened without this being expressly permitted in the instruction manual (e.g. for cleaning purposes).
- → the instructions in this instruction manual have not been followed.
- → the spa table shows changes due to repair work by personnel not authorized by Gharieni Group GmbH.

24. EC-Declaration of Conformity

EC-Declaration of Conformity

We.

Gharieni Group GmbH Gutenbergstraße 40 47443 Moers / Germany

hereby declare, in sole responsibility, that, due to its design and construction, the device named below complies with the relevant, fundamental safety and health requirements of the EU.

(Type or model, name)

CE

Lifting column beds

Lina Select; MLX Quartz; MLX Limber; PediSpa series; MLR Wet; MLW Space; MLX iDome (MLX i³); MLR; MLX; RLL series; Ellipse; 601, E-Line, 601 Podo

2022

Relevant EU directives and harmonized standards used:

2006 / 42 / EU Machinery Directive

2014 / 35 / EU Low Voltage Directive

2014 / 30 / EU Electromagnetic Compatibility Directive

2011 / 65 / EU RoHS Directive

DIN EN ISO 12100 (2011)

Safety of machinery - general principles for design Risk assessment and risk reduction

Responsible for documents:

Manufacturer's signature:

Place and date:

Mohammad Abbassi Gutenbergstraße 40 47443 Moers / Germany Sammy Gharieni, CEO

Moers, 01.02.2022

25. Status of Edition

EDITION	ALTERATIONS (PAGES)	DATE
First edition	-	04/06/2021
Second edition		04/09/2021
Third edition	1, 6, 8, 11, 14, 26, 27, 28, 55, 83	04/28/2021
Fourth edition	64, 65	05/20/2021
Fifth edition	complete revision	02/01/2022



NOTES

THE OWNERSHIP RIGHTS TO THIS INSTRUCTION MANUAL ARE RESERVED. REPRODUCTION OR TRANSFER TO THIRD PARTIES IS PROHIBITED WITHOUT THE CONSENT OF GHARIENI GROUP GMBH. GHARIENI GROUP GMBH RESERVES THE RIGHT TO PROTECT ITS PROPERTY RIGHTS AND TO PROSECUTE ANY MISUSE.

SALES AND SHOWROOM	PRODUCTION, PICK-UP AND REPAIR
Gharieni Group GmbH	Gharieni Group GmbH
Gutenbergstraße 40	Am Schürmannshütt 24
47443 Moers / Germany	47441 Moers / Germany