



INSTRUCTION MANUAL AND ASSEMBLY INSTRUCTION

Chairs and stools



(fig. similar / fig. serves as an example **only**: Colour, upholstery and design of the respective chair / stool may vary depending on model)

Gharieni Group GmbH
Am Schürmannshütt 24
D - 47441 Moers

➤ Phone:	+49 (0)2841/88300-0
➤ Fax:	+49 (0)2841/88300-999
➤ Customer service hotline:	+49 (0)2841/88300-40
➤ E-mail:	service@gharieni.de
➤ Web:	www.gharieni.de

Index

1. Safety information	4
1.1 Abbreviations	4
1.2 Signal words.....	4
1.3 Safety instructions	5
2. General information	7
3. Prefaces	7
4. Intended use	8
5. Unpacking and assembly.....	8
5.1 Unpacking.....	8
5.2 Assembly	9
5.2.1 Assembling of the backrest (optional)	10
6. Upholstery.....	10
7. Operation.....	11
7.1 Characteristics	11
7.2 View	12
7.3 Adjustment of the height positions.....	13
7.3.1 Adjustment of the seat height	13
7.3.2 Adjustment of the height of the backrest (for models incl. backrest)	13
8. Cleaning and maintenance	14
8.1 Cleaning and care of the artificial leather surfaces	15
8.2 Cleaning and care of the cruciform base or castor base	15
9. Repair.....	16
10. Optional accessories	16
10.1 Oro® Synthetic Leather Cleaner.....	16
10.2 Coloured cruciform base or castor base	17
10.3 Foot switch for the adjustment of the seat height	17
10.4 Circular foot rest.....	17
10.5 Coloured upholstery made of artificial leather.....	18

10.6 Covers for chairs and stools	18
11. Conditions of transport, storage and operation	19
11.1 Transport	19
11.2 Storage	19
11.3 Operation.....	19
12. Technical data	19
13. Waste management	20
14. Guarantee provisions.....	21
14.1 Guarantee exclusion.....	21
15. Status of edition.....	21



Do not dispose of this product together with your domestic waste. Dispose of the product in accordance with the current local disposal regulations. Do not remove the symbols / labels (if existing) from the product.

1. Safety information

When using the chair / stool, especially when children are present, basic safety precautions should always be followed, including the following:

READ THE COMPLETE SAFETY INFORMATION AND SAFETY INSTRUCTIONS CAREFULLY BEFORE YOU USE THE CHAIR / STOOL FOR THE FIRST TIME.

- All information included in those pages serve for the protection of the user. If you ignore the safety information and safety instructions, you will endanger your safety and health as well as you may damage the chair / stool permanently.
- MAKE SURE THAT THIS MANUAL IS AVAILABLE TO ANYONE USING THE GHARIENI CHAIR OR STOOL AND MAKE SURE THAT IT HAS BEEN READ AND UNDERSTOOD PRIOR TO USING THE DEVICE.
- This instruction manual is an integral part of the product and must be carefully kept in a safe place in order to consult it throughout the equipment service life. Copies of this instruction manual are available upon request.
- The Gharieni Group GmbH shall not be held responsible for any damages, direct or indirect, caused to people, animals or objects resulting from negligence or non-compliance with the instructions contained herein.

★ Store this manual in a safe place so you can use it whenever it is needed. Strictly observe the instructions to avoid damage to persons and property.

1.1 Abbreviations



➤ Operating advice

1.2 Signal words

⚠ DANGER! indicates a hazardous situation which, if ignored, will result in death or serious injury.

⚠ CAUTION! indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.

⚠ WARNING! indicates a hazardous situation which, if ignored, could result in death or serious injury.

NOTICE! indicates possible damage to the product.

1.3 Safety instructions

DANGER

To reduce the risk of serious injury to persons:

1. Non-compliance of the orders of this instruction manual will endanger the safety and health of the user and / or can result in damages to the chair / stool.
2. **Never** rest, stand or kneel on the seating surface of the chair / stool. RISK OF INJURY! RISK OF DAMAGE!
3. **Never** stand on the cruciform base or castor base of the chair / stool. RISK OF INJURY! RISK OF DAMAGE!
4. The **maximum** load of the chair / stool is **120 kg** and **must not be exceeded**. RISK OF DAMAGE! RISK OF BREAKAGE! RISK OF INJURY!
5. Children **must not** use the chair / stool **unsupervised**. RISK OF INJURY!
6. The chair / stool is **not intended and not suitable** for the transport of persons. RISK OF INJURY!
7. Never try to repair the chair / stool yourself. If the chair / stool does not work properly, please contact the manufacturer or the shop you purchased the product at. Original spare parts should be used only.
8. The gas pressure spring **must never** be repaired or replaced by yourself. If the gas pressure spring does not work properly, please contact the manufacturer or the shop you purchased the chair / stool at. Original spare parts should be used only.

WARNING!

To reduce the risk of injury to persons:

1. Any repairs and maintenance work must be carried out by qualified professionals authorized by the Gharieni Group GmbH **only!** . RISK OF DAMAGE! RISK OF INJURY!
2. Never use the chair / stool if it has been damaged or does not work properly. Return the chair / stool to an authorized aftersales service for examination and repair. RISK OF INJURY!
3. Do not allow any unauthorized person to use the chair / stool!
4. **Never** rest on the backrest of the chair (if equipped). Do not exert strong physical forces on this component; otherwise you can damage the backrest and / or the chair itself permanently. RISK OF TIPPING! RISK OF BREAKAGE! RISK OF INJURY!

5. When you adjust the seat height and / or the backrest of the chair / stool, always observe that your fingers cannot get caught. RISK OF CRUCHING!
6. While unpacking, the packaging materials (polythene bags, polystyrene pieces, etc.) should be kept away from children and pets. RISK OF INJURY! CHOKING HAZARD!
7. **Always** keep children and pets away from the chair / stool.
8. Children **must never** play with the chair / stool or its single components.
9. The chair / stool is not intended to be operated by persons with reduced physical, sensory and mental capabilities or lack of experience or knowledge, unless they are supervised or instructed concerning the use of the product and do understand the danger resulting thereof.

NOTICE!

1. For safety reasons, the castors are locked automatically if the chair / stool is not used (roll stop function).
2. **Never** rest, stand or kneel on any part of the seating surface of the chair / stool. Do not exert strong physical forces on the seating surface; otherwise you can damage the upholstery of the chair / stool permanently. RISK OF DAMAGE!
3. The chairs and stools are intended for indoor use only.
4. Do not spill water or any other liquids over or on the chair / stool. Should you spill any water, dry the chair / stool thoroughly. RISK OF DAMAGE!
5. **Never** immerse any parts of the chair / stool or the product itself in water. When cleaning the chair / stool, make sure that no water penetrates the chair / stool or the gas pressure spring. RISK OF DAMAGE!
6. Use or store the chair / stool in a dry environment only.
7. Use the chair / stool only for its intended use as described in this manual. Do not use attachments / accessories not recommended by the manufacturer.
8. **Do not place** any objects or liquids on the chair / stool. The chair / stool as well as the material can be damaged thereby. RISK OF DAMAGE!
9. Remove possible dust accumulation at the gas pressure spring **regularly**.
10. Clean the chair / stool regularly (s. chapter CLEANING AND MAINTENANCE).
11. **Do not use** a steam cleaner for cleaning. RISK OF DAMAGE!

12. Never use abrasive cleaners, solvents or chemical products for the cleaning of the chair / stool or the upholstery material.

SAVE THESE INSTRUCTIONS.


2. General information

Dear Customer,

we would like to thank you for purchasing this quality-product as well as for your confidence. **Read the complete IM before you use the chair / stool for the first time.** Reading the complete IM is essential for its proper and confident use and will help you to use the product to your entire satisfaction. Our chair / stool is very robust and has a long operating life if it is used properly.

Read the instructions very carefully and use the chair / stool in its intended use as described only to protect you from danger. Keep the IM handy and near of the product.

MAKE SURE THAT THIS MANUAL IS AVAILABLE TO ANYONE USING THE CHAIR / STOOL AND MAKE SURE THAT IT HAS BEEN READ AND UNDERSTOOD PRIOR TO USING THE PRODUCT.

 WARNING! Failure to follow these instructions endangers the operator's safety and health and / or can damage the chair / stool.

3. Prefaces


- ❖ The Gharieni chairs and stools are subject to the highest safety and quality standards.
- ❖ Before initial operation, please check that all components of the chair / stool are present and that they are not visible damaged.

4. Intended use

- ❖ Read the instructions very carefully and **only** use the chair / stool in its intended use as described to protect you from danger.
- ❖ The chairs / stools are **not intended and not suitable** for the transport of persons.
- ❖ The Gharieni chairs and stools are comfortable seating accommodation for the workplace. The chairs / stools are intended for professional activities which can be carried out in sitting position wholly or partially. **No other use is permitted: it will affect your guarantee rights.**
- ❖ The chairs and stools are intended for indoor use **only**.

★ The manufacturer and distributor are not responsible for any damage or injury in the event of failure to comply with these instructions.

5. Unpacking and assembly

 **WARNING!** While unpacking, the packaging materials (polythene bags, polystyrene pieces, etc.) should be kept away from children and pets. CHOKING HAZARD! RISK OF INJURY!


5.1 Unpacking

Please observe the following when the chair / stool is delivered in a cardboard:

- Open the top of the packaging carefully.
- Do not use any sharp-edged items which can damage the upholstery.
- Remove all parts carefully.
- Check that all components of the chair / stool are present and that they are not visible damaged.


5.2 Assembly

1. Place the pre-assembled cruciform base or castor base (**A**) on a level surface.
2. Insert the gas pressure spring (**B**) with its **wide** end into the assembly opening provided in the middle of the cruciform base or castor base (**C**) (s. fig below).

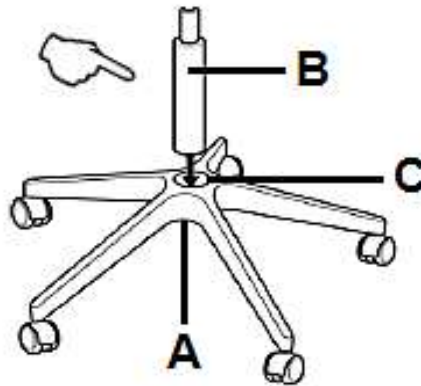

A	CRUCIFORM BASE or CASTOR BASE (pre-assembled)
B	GAS PRESSURE SPRING (wide end)
C	ASSEMBLY OPENING in the middle of the cruciform base or castor base

3. Attach the pre-assembled seating surface (**E**) via the connecting opening (**F**) to the narrow end of the gas pressure spring (**D**) (s. fig below).

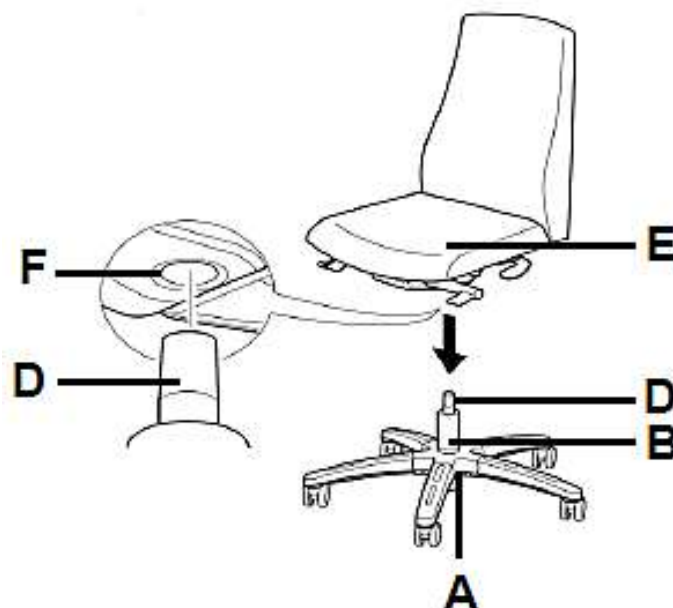

(fig. similar / fig. serves as an example for the assembly of a chair / stool **only**)

A	CRUCIFORM BASE or CASTOR BASE(pre-assembled)
B	GAS PRESSURE SPRING (wide end)
D	GAS PRESSURE SPRING (narrow end)
E	SEATING SURFACE (pre-assembled)
F	CONNECTING OPENING of the seating surface

4. Sit down on the chair / stool now to weight the seating surface and to stabilise the mechanical connection thereby.

⚠DANGER! Never rest, stand or kneel on the seating surface of the chair / stool. RISK OF INJURY! RISK OF DAMAGE!

⚠DANGER! The maximum load of the chair / stool is **120 kg** and **must not be exceeded**. RISK OF DAMAGE! RISK OF BREAKAGE! RISK OF INJURY!

5.2.1 Assembling of the backrest (optional)

1. Open the appropriate locking lever (positioning depends on model) for the height adjustment of the backrest.
2. Insert the backrest into the holder provided on the seating surface.
3. Push the backrest downwards carefully until the safety bolt below the holder locks.
4. Select the desired height of the backrest and then fix the backrest properly using the locking lever.

6. Upholstery

- ❖ The surface of the upholstery of the chair / stool is made of easy-care and durable ARTIFICIAL LEATHER and available in many colours of our two colour collections (s. chapter 10.5 COLOURED UPHOLSTERY MADE OF ARTIFICIAL LEATHER).

7. Operation

⚠️ DANGER! **Never** rest, stand or kneel on the seating surface of the chair / stool. RISK OF INJURY! RISK OF DAMAGE!

⚠️ DANGER! The **maximum** load of the chair / stool is **120 kg** and **must not be exceeded**. RISK OF DAMAGE! RISK OF BREAKAGE! RISK OF INJURY!

⚠️ DANGER! Children must not use the chair / stool unsupervised. RISK OF INJURY!

⚠️ WARNING! **Never** rest on the backrest of the chair (if equipped). Do not exert strong physical forces on this component; otherwise you can damage the backrest and / or the chair itself permanently. RISK OF TIPPING! RISK OF BREAKAGE! RISK OF INJURY!

NOTICE! **Never** rest, stand or kneel on any part of the seating surface of the chair / stool. Do not exert strong physical forces on the seating surface; otherwise you can damage the upholstery of the chair / stool permanently. RISK OF DAMAGE!

NOTICE! For safety reasons, the castors are locked automatically if the chair / stool is not used (roll stop function).

7.1 Characteristics

- ❖ The Gharieni chairs and stools are comfortable seating accommodation for the workplace.
- ❖ The chairs / stools are intended for professional activities which can be carried out in sitting position wholly or partially.
- ❖ **Depending on model** the seating surface of the respective chair / stool is rotatable.
- ❖ The seat height of all models can be easily adjusted pneumatically to the desired positions using a gas pressure spring by means of a lever (s. chapter 7.3.1 ADJUSTMENT OF THE SEAT HEIGHT).
- ❖ **Depending on model** the range of the adjustment of the seat height of the respective chair / stool is from approx. 47cm up to approx. 83cm.
- ❖ Models incl. backrest: For models incl. backrest, the backrest can also be adjusted uncomplicatedly by means of a lever to conform with diverse requirements (s. chapter 7.3.2 ADJUSTMENT OF THE HEIGHT OF THE BACKREST).

- ❖ Models incl. backrest (optional)¹: The inclination of backrest of the appropriate chair can be adjusted using an additional level (s. chapter 7.3.2 ADJUSTMENT OF THE HEIGHT OF THE BACKREST / INCLINATION OF THE BACKREST).
- ❖ The **maximum** load of the chair / stool is **120 kg** and **must not be exceeded**.

7.2 View



(fig. similar / fig. serves as an example **only**: Colour, upholstery and design of the respective chair / stool may vary depending on model)

1	BACKREST (models incl. backrest only)
2	SEATING SURFACE
3	Lever for the PNEUMATIC ADJUSTMENT OF THE SEAT HEIGHT (positioning depends on model)
4	Lever for the MANUAL ADJUSTMENT OF THE HEIGHT OF THE BACKREST (models incl. backrest only / positioning depends on model)
5	GAS PRESSURE SPRING (adjustment of the seat height)

¹ Depending on model

6	CRUCIFORM BASE or CASTOR BASE
7	Rubberised CASTORS incl. roll stop function

7.3 Adjustment of the height positions

- ❖ Depending on the respective model of the chair / stool different adjustments can be carried out (adjustment of the seat height / adjustment of the height of the backrest and adjustment of the inclination of the backrest according to the appropriate models).



For safety reasons, the castors are locked automatically if the chair / stool is not used (roll stop function).

7.3.1 Adjustment of the seat height

- ❖ The seat height of all models can be easily adjusted pneumatically to the desired positions using a gas pressure spring by means of a lever (positioning of the lever depends on model).
 - ❖ The appropriate lever is located laterally under the seating surface² (3 / s. chapter 7.2 VIEW).
 - ❖ **Depending on model** the range of the adjustment of the seat height of the respective chair / stool is from approx. 47cm up to approx. 83cm.
1. Sit down on the chair / stool.
 2. Use and hold the appropriate lever for the adjustment of the seat height.
 3. Weight the chair / stool more or less using your body weight to reach the desired height position of the seating surface.
 4. When the desired height position has been reached, release the lever to lock the set seat height.

7.3.2 Adjustment of the height of the backrest (for models incl. backrest)

- ❖ For models incl. backrest, the backrest can also be adjusted uncomplicatedly by means of a lever (positioning of the lever depends on model) to conform with diverse requirements.

² Positioning depends on model

1. Open the appropriate locking lever (positioning depends on model) for the height adjustment of the backrest³ (4 / s. chapter 7.2 VIEW).
2. Push the backrest upwards or downwards carefully until the desired height has been reached.
3. Close the appropriate locking lever to lock the set height of the backrest.

INCLINATION OF THE BACKREST (DEPENDING ON MODEL):

- ❖ The inclination of the backrest⁴ of the **appropriate** chairs can be adjusted using an additional level (positioning depends on model).
1. Open the appropriate locking lever for the adjustment of the inclination of the backrest⁵.
 2. Move the backrest back or forth carefully until the desired inclination has been reached.
 3. Close the appropriate locking lever to lock the set inclination of the backrest.

8. Cleaning and maintenance

NOTICE! Do not spill water or any other liquids over or on the chair / stool. Should you spill any water, dry the chair / stool thoroughly. RISK OF DAMAGE!

NOTICE! Never immerse any parts of the chair / stool or the product itself in water. When cleaning the chair / stool, make sure that no water penetrates the chair / stool or the gas pressure spring. RISK OF DAMAGE!

NOTICE! Remove possible dust accumulation at the gas pressure spring regularly.

NOTICE! Do not use a steam cleaner for cleaning. RISK OF DAMAGE!

NOTICE! Never use abrasive cleaners, solvents or chemical products for the cleaning of the chair / stool or the upholstery material.

³ Positioning depends on model

⁴ Depending on model

⁵ Positioning depends on model

- ❖ **Do not wear** any arm and finger decoration such as rings or bracelets while carrying out any cleaning or maintenance operations. Otherwise you can scratch and damage the upholstery and / or the material of the cruciform base or castor base of the chair / stool unintentionally.
- ❖ Use water or a mild cleaning agent which is suitable for the material **only**.
- ❖ **Do not use** extremely hot water for the cleaning of the chair / stool.
- ❖ **Do not use** any scouring pads or floor clothes.
- ❖ **Do not use** any aggressive cleaning agents such as scouring powders, floor cleaners, etc.
- ❖ **Do not use** any dishwashing detergents.
- ❖ **Do not use** any solvents or bleaching agents.
- ❖ **Do not use** any essential oils.

NOTICE! If you use a disinfection agent it is **absolutely necessary** to contact the Gharieni customer service before.

8.1 Cleaning and care of the artificial leather surfaces

- ❖ The surface of the upholstery of the chair / stool is made of easy-care and durable artificial leather.
- ❖ Vacuum the surfaces made of artificial leather (seating surface / backrest (optional)) **regularly**.
- ❖ Clean and care the artificial leather surfaces using a special detergent for artificial leather **only** (optional available from Gharieni: s. chapter 10.1 ORO® SYNTHETIC LEATHER CLEANER).

8.2 Cleaning and care of the cruciform base or castor base

- ❖ Clean the cruciform base or castor base using a damp and soft cloth **only** provided with a small amount of soap.
- ❖ Dry the cruciform base or castor base thoroughly using a soft and dry cloth.

9. Repair

We are responsible for safety and reliability of the chairs / stools under the following conditions only:

1. Repairs and modifications must be carried out by Gharieni Group GmbH or a person authorized by Gharieni Group GmbH.
2. The chairs / stools are used as described in the instruction manual **only**.
3. Unauthorized modifications or manipulating the chairs / stools will void the liability of the manufacturer.
4. **If the gas pressure spring has been damaged, it must be repaired or replaced by the manufacturer or by qualified professionals authorized by the Gharieni Group GmbH only!**

10. Optional accessories

- ★ For detailed information regarding the optional accessories (s. below) please contact the Gharieni customer service. We will be glad to advise you!

10.1 Oro® Synthetic Leather Cleaner

- ❖ The ORO® SYNTHETIC LEATHER CLEANER is optional available from Gharieni for an additional charge.
- ❖ This agent cleans and maintains all chair / stool and treatment table covers and other surfaces made of **artificial leather**.
- ❖ Due to the simultaneous usage of the ORO® SYNTHETIC LEATHER CLEANER and synthetic leather care as well as the special sponge included in the set, dirt and stubborn stains can also be removed quickly and thoroughly.

ORO® SYNTHETIC LEATHER CLEANER	Article Number: 79444
--------------------------------	-----------------------

NOTICE! Use the cleaner for artificial leather surfaces **only**.

NOTICE! Do not use the cleaner for surfaces made of PU (polyurethane)!

10.2 Coloured cruciform base or castor base

- ❖ For many chair or stool models a COLOURED CRUCIFORM BASE OR CASTOR BASE in black / grey / chrome or titanium is optional available for an additional charge.
- ★ For detailed information regarding the COLOURED CRUCIFORM BASE OR CASTOR BASE as well as the compatibility with your chair / stool please contact the Gharieni customer service. We will be glad to advise you!

10.3 Foot switch for the adjustment of the seat height

- ❖ For many chair or stool models a FOOT SWITCH for the adjustment of the seat height (s. fig. below) is optional available for an additional charge.
- ★ For detailed information regarding the FOOT SWITCH as well as the compatibility with your chair / stool please contact the Gharieni customer service. We will be glad to advise you!



FOOT SWITCH FOR THE ADJUSTMENT OF
THE SEAT HEIGHT

Article number: 42518

10.4 Circular foot rest

- ❖ For several chair or stool models an additional CIRCULAR FOOT REST which increases the foot rest (s. fig. below) is optional available for an additional charge.
- ★ For detailed information regarding the CIRCULAR FOOT REST as well as the compatibility with your chair / stool please contact the Gharieni customer service. We will be glad to advise you!



CIRCULAR FOOT REST
(increases the foot rest)

Article number: 42500

10.5 Coloured upholstery made of artificial leather

- ❖ Optionally for an additional charge it is possible to equip many of the chairs or stool models with a COLOURED UPHOLSTERY made of **artificial leather**.
- ★ The respective colours can be chosen from two various colour collections:
 - Colour collection of the standard artificial leather
 - Colour collection of the Ferrari Stamskin® Top artificial leather (optional artificial leather cover)
- ★ **For detailed information regarding the COLOURED UPHOLSTERY MADE OF ARTIFICIAL LEATHER as well as the available colours for your chair / stool please contact the Gharieni customer service. We will be glad to advise you!**

10.6 Covers for chairs and stools

- ❖ Appropriate covers for many chair or stool models are optional available for an additional charge.
- ❖ Our covers, which are specially-manufactured for our chairs and stools, will perfectly protect your seating accommodation for the workplace from dirt and heavy use.
- ❖ Our covers are available in three different colours: white / choco and crème.
- ❖ You can order the relevant cover when purchasing the chair or stool⁶.
- ★ **For detailed information regarding the right size and suitable version of the covers for your chair / stool please contact the Gharieni customer service. We will be glad to advise you!**

⁶ Availability depends on model

11. Conditions of transport, storage and operation

11.1 Transport

- ❖ Carry the chair / stool by its cruciform base or castor base during transport **only**.
- ❖ **Never** carry the chair / stool by its seating surface / backrest (optional) or its armrests (optional) during transport; otherwise you can damage the chair /stool seriously.

11.2 Storage

- ❖ Store the chair / stool in a dry environment **only**.

11.3 Operation

- ❖ Operate / use the chair / stool in a dry environment **only**.

12. Technical data

Range of the height adjustment of the seating surface (depending on model)	from approx. 47 cm up to approx.83 cm
--	---------------------------------------

Maximum load of the seating surface	120 kg
--	--------

- ❖ Technical modifications reserved.

13. Waste management

1. While unpacking, the packaging materials (polythene bags, polystyrene pieces, etc.) should be kept away from children and pets. **CHOKING HAZARD! RISK OF INJURY!**
2. Do not dispose of the chair / stool together with your domestic waste. Dispose of this product in accordance with the current local disposal regulations. Do not remove the relevant symbols from the product.
3. **Never** expose to open flames.
4. The chair / stool should be cleaned thoroughly before disposal to protect persons, environment and materials.
5. The chairs / stools are made of metal and plastic components as well as gas pressure springs. Dispose of the separate components in accordance with the current local disposal regulations.
6. Dispose of any paper and cardboard into the corresponding containers.
7. Dispose of any plastics into the corresponding containers
8. If suitable containers are not available at your residential area, dispose of these materials at a suitable municipal collection point for waste-recycling.
9. Receive more detailed information from your retailer, municipal facilities or:

Gharieni Group GmbH

➤ Phone:	+49 (0)2841/88300-0
➤ Fax:	+49 (0)2841/88300-999
➤ Customer service hotline:	+49 (0)2841/88300-40
➤ E-mail:	service@gharieni.de



Materials marked with this symbol are recyclable.



Please contact your local authorities to receive further information.

14. Guarantee provisions

The Gharieni Group GmbH supplies all chairs and stools subject to a 2-years guarantee. Wearing parts (such as e.g. incandescent lamps, UV lamps, glass panels, consumables etc.) are not covered by this guarantee. Damage or loss due to unprofessional or improper use, non-compliance with the provisions of the instructions for use and / or gross negligence is not covered by guarantee either. In addition, the guarantee is invalidated if any stickers (such as e.g. the type plate, instruction notices etc.) are removed or if the products or parts of the products are opened without this being explicitly allowed in the operating instructions (e.g. for cleaning).

14.1 Guarantee exclusion

Upon delivery, it is necessary to check that the equipment has not been damaged during transportation and that the set of accessories is complete and in good condition. Claims must be filed within 8 days after the delivery of the Gharieni product. Apart from the cases specified in the supply agreement, **the guarantee is void when:**

- The malfunction is attributable to the operator.
- The instructions in this instruction manual are not followed.
- The Gharieni chairs and / or stools has suffered changes after repair operations performed by a third party unauthorized by Gharieni Group GmbH.

15. Status of edition

EDITION	ALTERATIONS (PAGES)	DATE
First edition	-	02/04/2018



NOTES

[illegible]

THE PROPERTY RIGHTS OF THIS INSTRUCTION MANUAL ARE RESERVED. ITS REPRODUCTION OR TRANSMISSION TO THIRD PARTIES IS FORBIDDEN WITHOUT THE AUTHORISATION OF THE OWNING COMPANY. THE POWER TO PROTECT ITS RIGHTS IS RESERVED AND OFFENDERS SHALL BE PROSECUTED.

Gharieni Group GmbH
Am Schürmannshütt 24
D - 47441 Moers